

# LAUNDRY *and* ENERGY SAVING Tips





# Congratulations On The Purchase Of Your New Ramtons Appliance



# How To Use Your Ramtons Front Load Washing Machine



Transit Bolt

## Front Load

1. Some settings will vary model to model, (RW/145 = 6Kg washer. RW/144 = 7KG washer. RW/146 = 8KG washer + 6KG Dryer) however there are some fundamental similarities.
2. Ensure your Ramtons front loader is installed to an inlet and drainage outlet correctly by a certified technician/plumber.
3. The transit bolts at the back of the machine will need to be removed before use.
4. Once connected. Power the machine and add your garments to the drum.
5. Open the detergent tray – there are 3 compartments
  - a. Left most compartment add Persil Gel for 'Main Wash', the middle compartment if for softener and the right compartment you can add Persil Gel for a 'Pre Wash'.
  - b. The pre-wash cycle is an extra cycle (especially for heavily soiled clothes) that can be added at the beginning of most of your washing machine cycles. Most machines don't allow pre-wash for the Speed Wash, Delicates, Rinse and Spin, and Wool cycles. Before running the regular cycle, the pre-wash cycle will fill with water, agitate, and spin.
6. Measure out your Persil Gel in the cap – depending on the nature and volume of your clothes.
7. Choose your setting depending on the Ramtons model you purchased (either a preprogrammed cycle or one you customize based on speed and temperature) and start the cycle.
8. DO NOT power off the machine from the mains mid wash For more details – kindly view the instruction manual provided or visit the product page in [www.Ramtons.com](http://www.Ramtons.com)

This booklet will take you through each step of the Ramtons washing process. It is specially designed to help you get the very best from your washing machine, as well as provide useful tips to get the most out of each load by perfectly utilizing your machine and Persil detergent.



## Pro Tips

1. Once you complete your cycle- leave the door slightly ajar for a few hours in order to prevent dirty and bacteria build-up
2. Ensure you remove any metallic objects before you start your wash to prevent drum damage



## How To Use Your Ramtons Top Load Washing Machine



### Top Load

1. Ensure your Ramtons top loader is installed to an inlet and drainage outlet correctly by a certified technician/plumber.
2. Open the lid and add your garments in to the drum.
3. Measure your Persil Washing Machine Powder or Persil Gel based on the nature and quantity of you load and pour it in to the detergent tray.
4. Power on the machine and choose your program:
  - a. Normal, soft, soak, strong or quick & memory
  - b. Customize your wash, spin and rinse time should you wish
  - c. Adjust the temperature and water level based on the nature and quantity of garments in the drum and start
5. If you've forgotten clothes – don't worry, Ramtons' top loads allow you to add them during the wash. As you open the lid – the cycle will pause, allowing you to add/remove at your will.
6. **DO NOT** power off the machine from the mains mid wash.
7. For more details – kindly view the instruction manual provided or visit the product page in [www.Ramtons.com](http://www.Ramtons.com)

#### Pro Tips

1. Utilize the tub clean function by simply adding a little detergent to the detergent tray and pressing start. Try to clean your tub at least twice per month for proper maintenance
2. Long press wash and rinse to activate and de-activate child lock
3. Regularly clean your lint filter once full



## How To Use Your Ramtons Twin-Tub Semi Automatic Washing Machine



### Twin Tub

1. Connect the machine to a power main (ensure, for your safety, it is a safe distant from any water) and connect the inlet pipe to a tap of running water.
2. Before adding clothes to the left hand tub, set the program to wash and allow the tub to fill up to your desired level. Measure you Persil Washing Machine Powder based on your load and add it directly to the water.
3. Adjust the wash timer for a few seconds to allow for the Persil to mix well with the water. Stop the timer and add your clothes for the main wash.
4. Set the time you require and the setting 'heavy or normal'.
5. Once complete, select the drain setting. The water outlet at the bottom of the machine should be directed to dispose or collect the water outside.
6. Repeat the wash process without any detergent to get rid of detergent residue.
7. **Air Dry:** To further reduce water content – add your garments in to the right hand tub and begin the air dry process if you wish. You will need to drain any excess water after this program is completed.
8. For more details – kindly view the instruction manual provided or visit the product page in [www.Ramtons.com](http://www.Ramtons.com)

#### Pro Tips

Avoid cleaning these machines with a hose – remember they're electric! Simply clean with a damp cloth.





# Temperature Settings and Detergent Quantity

**Did you know:** A Ramtons front load typically uses between 10 - 15 liters of water? Large saving opportunities!

## Temp Settings

- 1. **Cold Water:** Best for dark colors and delicate fabrics. It is also a perfect choice for any lightly soiled clothes like office wear. Cold water will not harm any washable fabric and saves on utility costs.
- 2. **Warm Water:** Best for synthetic, permanent press fabrics. Warm water should be chosen for any colored garments that are heavily soiled with oil or stains.
- 3. **Hot Water:** Best for white cotton fabrics that are worn or used close to the body like underwear, socks, and bed sheets. If you have laundry that has really heavy soil like work jeans, mechanics' overalls, kids' play clothes and cleanliness is more important than protecting the color, hot water may be needed to remove the stains.

## Detergent

### Gel

- 1. **How much Persil Gel to use?**
  - a. 4-5KG load: **100ml**
  - b. 6-8KG load: **125ml**
  - c. 9KG +: **150ml**



### Powder

- 2. **How much Persil Washing Powder to use?**
  - a. 4-5KG: **100g**
  - b. 6-8KG: **150g**
  - c. 9KG +: **200g**



# Stain Removal Tips

There may be a few stains that are not removed completely with normal washing. For these, please refer to the stain removal guide below.

Always check the fabric care label to ensure the suitability of the garment before using any of the treatments.

## COMMON STAINS

## HINTS AND TIPS

Ink: ball point, felt tip pens



Soak overnight in cold water containing Persil Gel, then wash according to the fabric care label. For older stains, dab with nail polish remover (not suitable for synthetic fabrics) then wash as normal.

Coffee, fruit juice, tea, wine, sodas



Soak for 1 hour in cold water, and then wash in Persil. Do not use a colour or liquid detergent.

Blood



If the stain is fresh, rinse immediately with cold water and wash in Persil according to the fabric care label.

Greasy stains: cooking oil, lipstick, margarine, butter, mascara, shoe polish, greasy food



Pre-treat with Persil Gel and leave for 1 hour. Wash at the hottest temperature allowed on the fabric care label

Creamy stains: chocolate, cake icing, egg, ice cream, milk, jam



Soak in warm water containing Persil, or pretreat with Persil gel, and then wash as normal according to the fabric care label.

Grime (oil, sweat, fluids): Collars, cuffs, underwear stains



Pre-treat stains with Persil Gel and leave for 1 hour. Then wash with Persil according to the fabric care label.

Curry, Soup stains



Soak in warm water containing Persil powder solution or pretreat with Persil Gel, then wash with Persil according to the fabric care label.

Grass, mud



In case of mud, dry and then scrape off as much as possible. Pre-treat the remainder with Persil Gel then wash as normal in Persil at the hottest temperature allowed by the fabric care label.

Tomato, Ketchup, Red sauces



Soak for 1 hour in cold water and then wash as normal with Persil according to the fabric care label.





# Stain Removal Tips (CONTINUED)

Body fluids: Urine, vomit		Rinse as much as possible under cold running water, soak in cold water containing Persil, and then wash in Persil according to the fabric care label.
Antiperspirant, deodorant		Pre-treat the stain with Persil Gel then soak in warm water containing Persil, then wash as instructed on the fabric care label.
Stubborn beer stains		Pre-treat with Persil Gel then wash at the temperature stated on the fabric care label. For tough stains, dab with a solution of 1 part vinegar (acetic acid) to 4 parts water and then rinse thoroughly
Candle wax		Peel off any surface wax then sandwich the fabric with blotting paper/ kitchen towel. Use a warm iron to press down on the back of the fabric, then wash as normal according to the fabric care label.
Chewing gum		Harden the gum by putting the garment into a bag in the freezer, or by putting ice onto it. Break off as much gum as possible. Pre-treat with Persil Gel then wash as normal according to the fabric care label.
Disruptive stains: mould, rust		For most fabrics, sprinkle salt and squeeze a bit of lemon juice and leave overnight before washing as normal. For heavier stains, use a rust remover then wash as normal according to the fabric care label. These stains are difficult to remove form fine fabrics (e.g. wool, silk).
Nail polish		Use nail polish remover/acetone (don't use this on synthetic fabrics). Then wash the garment as instructed on the fabric care label.
Paint		To tackle water based latex, acrylic, emulsion and school paints, rinse stains while they're still wet using running water, then wash according to the fabric care label. To tackle oil based paint varnish, sponge with white spirit or proprietary paint brush cleaner before washing according to the fabric care label.
Petroleum Jelly		Pre-treat with Persil Gel then wash as normal following the fabric care label. Stains that have set may require several treatments.

# Persil Machine Wash Detergent

Persil with Millions of Stain Removers is your ultimate detergent for cleanliness and care.

It's unique German formula removes even the most stubborn stains with ease. This detergent is also available in a lavender fresh fragrance.

Only Persil provides perfect cleanliness that you can see, smell and feel. It is suitable for all types of washing machines.

- Key features:**
- Millions of stain removers that removes even stubborn stains with ease
  - Perfectly clean laundry
  - Fresh, long lasting Lavender fragrance
  - Suitable for both colored and white garments
  - Specially formulated to protect all kinds of washing machines from damage caused by excess foaming
  - Latest German technology
  - Packed in easy to store box and also available in a convenient gel form



## Expert Tip

The maintenance of your washing machine is important: remember to clean the filter and the dispenser at least once a month

## Top Tip

Remember, any stain is more likely to be removed if you do not allow it to set in



Ramtons takes laundry seriously. With a washing range of over 12 SKU's - Ramtons caters to a wide range of laundry needs and budgets.

#### Single tubs:

RW/129 - 6Kg  
RW/130 - 10Kg  
from: Ksh. 12,895

#### Twin tubs:

Semi automatic with air dry  
RW/125 - 6Kg  
RW/115 - 8Kg  
RW/116 - 10Kg  
RW/114 - 12Kg  
from: Ksh. 18,695

#### Top loads:

Fully automatic washer only  
RW/136 - 12Kg  
RW/140 - 16Kg  
from: Ksh. 47,995

#### Front loads:

Washer only  
RW/145 - 6Kg  
RW/144 - 7Kg  
from: Ksh. 39,995

#### Washer dryer

RW/146 - 8Kg+6Kg Dryer  
Ksh. 73,995



Visit our website: [www.RAMTONS.com](http://www.RAMTONS.com)

# WASH Symbol GUIDE

## 1 Wash Symbols



**No dashes** means suitable for high agitation/drum action was (e.g. cotton).



**One dash** means suitable for medium agitation/ drum action cycle (e.g. synthetic cycle).



**Two dashes** means suitable for a low agitation/drum action wash (e.g. wool cycle).



Hand wash only



Not suitable for machine washing

## 2 Drying Symbols



May be tumble dried



May be tumble dried on a delicate heat setting



May be tumble dried on normal heat setting



Do not tumble dry



Hang dry



Dry flat



Drip dry is recommended

## 3 Chlorine Bleach

If you decide to use chlorine bleach in your laundry, always follow manufacturers instructions



Any bleach (when needed)



Non-chlorine bleach (when needed)



Do not bleach

## 4 Ironing Symbols



Cool – 110 degrees  
Warm – 150 degrees  
Hot – 200 degrees

## 5 Dry Cleaning

The letter refers to the solvent suitable for the fabric. They are used by the dry cleaning specialist.





It takes

# Two to Tango!

Persil  Ramtons

