



FULL SIZE OVEN MANUAL

"Made In Turkey For Hypermart Ltd"

SERVICE CENTER CONTACT



servicecenter@hypermart.co.ke



MY RAMTONS



+254-020-2086295



Dear User,

Our purpose is to have this product, which was produced in our modern facilities and in accordance with Total Quality Management Philosophy, give the maximum benefit.

For that reason, we suggest that you read carefully and keep this manual on hand before you operate this product.

TABLE OF CONTENTS

1. FIRST USE OF THE APPLIANCE
2. TECHNICAL FEATURES OF THE OVEN
3. WARNINGS
4. DESCRIPTION OF OVEN AND CONTROL PANELS
5. USING OF COOK TOP
6. USING OF GAS OPERATED OVEN SECTION
7. USING OF ELECTRICITY OPERATED OVEN SECTION
8. SUGGESTED COOKING TABLE
9. MAINTENANCE AND CLEANING

1. SEETING YOUR APPLIANCE

Electric connection and safety

1. The appliance needs 16-amp fuse. If it is necessary, have an electrician make a 16-amp fuse
2. The appliance uses 230 V Ac 50Hz electricity. If network doesn't have this, get in touch with your authorized is not proper
3. Electrical connection should be done through grounded outlets in accordance with regulations. If there is not a grounded outlet get in touch with a licensed electrician. Our firm doesn't accept any responsibilities because of using improper outlets.
4. Don't let electric cord to touch hot surfaces of the oven.
5. After setting your oven the distance between the oven and rear wall should be 30 cm. Otherwise oven might overheat.

Gas connection and safety

1. Put the clamp around the hose. Heat the hose in the hot water, and put to house gas supply to the very end. Squeeze the clamp using a screwdriver.
2. For leakage control pay attention that the knobs on the control panel should be closed and the gas supply should be open. Check if there is any leakage using liquid soap.

Check the gas connection again.

Your appliance should be level with the kitchen counter. If necessary, adjust the level using appliance' legs.

Do not put the electric cord and gas hose through the rear side of the oven. Do not move the oven that connected to gas supply. Otherwise you may cause gas leakage.

2-TECHINICAL FEATURES OF THE OVEN

SPECIFICATIONS	60 x 60	50 x 60	50 x 50
Width	600 mm	500 mm	500 mm
Length	600 mm	600 mm	500 mm
Height	850 mm	850 mm	850 mm
Interior Width	457 mm	395 mm	395 mm
Interior Length	417 mm	385 mm	385 mm
Interior Height	345 mm	345 mm	345 mm
Oven Volume	66 lt	52 lt	52 lt
Lamp Voltage	15 W	15 W	15 W
Thermostat	50 - 300 °C	50 - 300 °C	50 - 300 °C
Timer	90 dk	90 dk	90 dk
Lower Resistance	1100 W	1000 W	1000 W
Upper Resistance	1000 W	800 W	800 W
Turbo Resistance	2200 W	-----	-----
Grill Resistance	2000 W	1500 W	1500 W
Fan Motor	23 W	23 W	23 W
Supply Voltage	230 V AC 50 Hz	230 V AC 50 Hz	230 V AC 50 Hz
Hot Plate Power Ø 145	1000 W	1000 W	1000 W
Hot Plate PowerØ 145 (Rapid)	1000 W (1500 W)	1000 W (1500 W)	1000 W (1500 W)
Hot Plate Power Ø 180	1500 W	-----	-----
Hot Plate Power Ø 180 (Rapid)	1500 W (2000 W)	-----	-----

Before the First Use,

Before operating the appliance, read the manual carefully. You will find the information related with your safety, the appliance's using and maintenance.

Keep this manual, for it might be used by others.

Note: This manual is for more than one model. Some features in this manual might not be for your appliance.

Burner Features	This table shows you the gas that you can use and technical scale for gas			
Gas Type		G 30	G 20	G 20
Gas Pressure	mbar	30	20	13
Auxiliary Burner	Power (kw)	0.90	0.80	0.90
	Injecktor size (mm ²)	0.50	0.70	0.80
	Consumption gr/h-m ³ /h	70	0.81	0.94
Normal Burner	Power (kw)	1.45	1.45	1.75
	Injecktor Size (mm ²)	0.65	0.90	1.10
	Consumption gr/h-m ³ /h	114	0.149	0.185
Strong Burner	Power (kw)	2.30	3.00	2.85
	Injecktor size (mm ²)	0.80	1.35	1.50
	Consumption gr/h-m ³ /h	181	0.284	0.301
Bruleur	Power (kw)	1.95	1.75	1.85
	Injecktor size (mm ²)	0.70	1.05	1.10
	Consumption gr/h-m ³ /h	154	0.185	0.195

 
*G 20 Natural Gas

** G30 LPG


3- WARNING

1. Your oven is adjusted for LPG
2. It operates on 230 V AC 50 Hz Voltage
3. If your network fuse is below 16 Amp, have an authorized electrician replace it with a 16 Amp.
4. Your oven should be used with grounded outlet. If grounded outlet is not used, our company doesn't accept any charges.
5. Keep your gas hose and electrical line away from hot parts, sharp edges, and don't let them touch to the appliance.
6. When gas tube gets faulty, have the authorized service replace it immediately.
7. Before replacing the lamp, disconnect the electric supply.
8. Connect your appliance to LPG supply in a 300 mm SS (30mbar) outlet pressure by a detonator.
9. Gas supply cord should be short and must not have any leakage.
10. While gas leakage check, you must not use lighters, matches, burning cigarettes, or similar fire making devices.
11. Operating Appliance causes moisture and heat in the kitchen, so you should let fresh air in regularly.
12. Some parts of the appliance may be hot while it operates, children should be kept away from the appliance.
13. You must not touch the oven glass cover while it operated.
14. Before operating appliance, you should keep curtains, papers or the other flammable materials away from the appliance. You must not keep any flammable material both inside and on the appliance.
15. While the appliance is operating, its outer surfaces get hot. Interior sides, heat supplying parts and the vapor are very hot. These parts still continue to be hot after turning the appliance off, so you must never touch these parts. Keep the pets and children away from the appliance.
16. Don't go away so long, while cooking liquid and oily foods, flame may occur due to the heat. Warning: In the danger of fire, cover the pot or pan with their covers and turn off the appliance. Don't leave hot oil and food without care, so they may cause fire.
17. This appliance is only for domestic use. Don't use it in garages and offices.
18. For cooking in the oven, you should adjust oven control knob and heating control knob together.
19. Keep your hands away from both top cover and hinges, because you may injure your hands.
20. Don't apply or put weight on the window cover or racks while they are open. The appliance may be turned over.
21. Top glass cover should not be closed, while surface elements are operating or hot. Don't put heavy, very hot or cold materials on glass cover.
22. While and after cleaning, pay attention not to take out the surface elements or replace them with each other.
23. While grill knob is on, parts may be hot so children should be kept away.


4. DESCRIPTION OF OVEN AND CONTROL PANEL

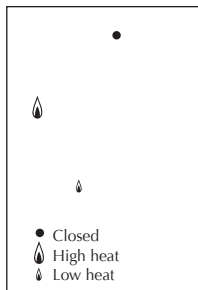


Gas Control Knob

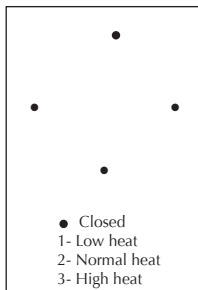 


Hot Plate Control Knob

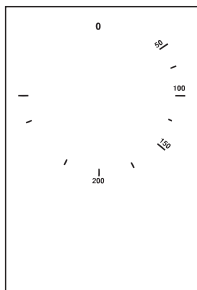 


Thermostat Knob

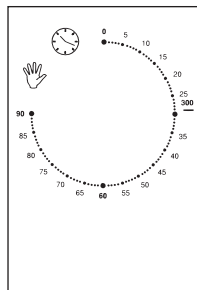 


Time Control Knob

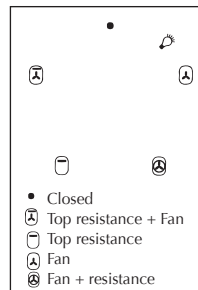 


Oven Control Knob

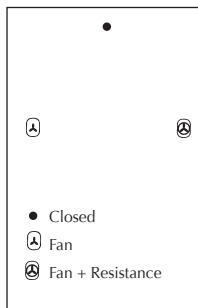 


Oven Control Knob

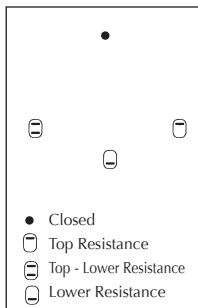 


Oven Control Knob

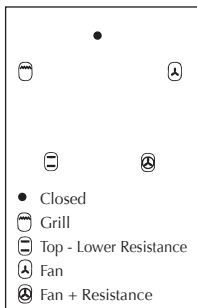 

Oven Control Knob

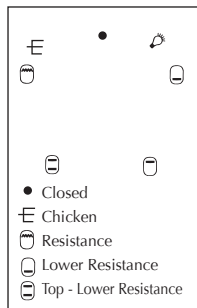 


Oven Control Knob

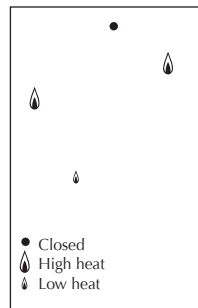 

Oven Control Knob

 4. DESCRIPTION OF OVEN AND CONTROL PANEL

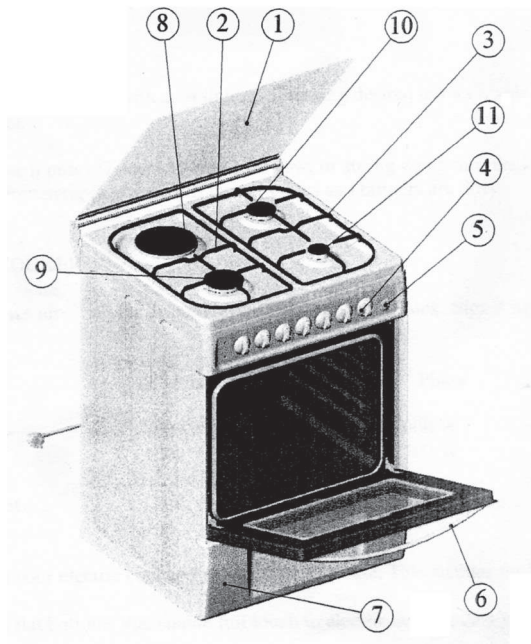

- 1- COVER
- 2- HOT PLATE GRILL
- 3- COOKER GRILL
- 4- CONTROL KNOB
- 5- IGNITION KNOB
- 6- HANDLE
- 7- LOWER DRAWER
- 8- HOT PLATE
- 9- STRONG BURNER
- 10- NORMAL BURNER
- 11- AUXILIARY BURNER

5. USING OF THE COOKER

 
USING OF THE GAS COOKER

In order to get maximum efficacy, pay attention to use the pots with flat bottoms and following bottom pot measurements.

Strong burner: 24-28 cm

Normal burner: 18-24 cm

Auxiliary Burner: 12-18 cm



In order to operate burner, press the knob and turn it to counter clockwise to the flame sign. Pressing on the lighter button, start burning. If the burning doesn't start repeat the process.

Operating auto lighter models:

Valves of the appliance are furnished with auto lighters. Pressing desired burner's valve turn it to flash sign (*).

After burning you may adjust the burner desired flame level.


While cooking, in the case it puts off, due to liquid overflow, or strong wind, turn the knob off and ventilate the room that the appliance is in. Wait at least for one minute before attempting restart. If burner tables and burners are dirty clean them. After cleaning you may start cooking. After cooking turn the knob off.

USING OF ELECRIC COOKER

Turn the knob to clockwise direction for desired level that you want to cook. Signal lights on the knob means that cooker operates. After cooing turn the knob off.

Size	1st Phase	2nd Phase	3rd Phase
150 mm	250 W	750 W	1000 W
180 mm	500W	1000 W	1500 W

 Reheat-cook on Low heat Cook on normal heat Frying

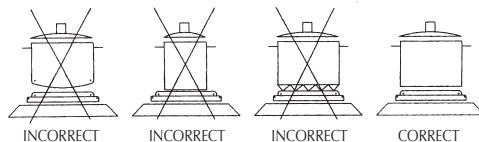

In the first using operate your electric cooker 5 minutes on 3rd phase. This enables the heat sensitive material on cooker to burn and cooker to harden.

If possible use pots with flat bottoms that enable full touch to electric cooker, thus you will get maximum efficacy.

6. USING OF GAS OPERATED OVEN SECTION

After first operating, the appliance will emit a smell caused by isolation and heater elements' first using. In order to get rid of this smell, operate your appliance for 45 minutes without cooking any thing.

In order to operate your appliance, turn the knob to full flame position. Then press the lighter in order to make a flame. If your appliance is not furnished with auto lighter, spark it using a fire supply such as matches through the hole and depress the valve. Be sure that broiler gets flame.

Warning 1: Before starting, do not open valves and wait so long, thus you will prevent gas accumulation and dispersion. It is vital for your safety.

Warning 2: While your appliance working, ventilate the room continuously.

MODELS WITH GAS SAFETY SENSORS

Your appliance has special safety apparatus. In case any broiler snuffs out, sensors next to the broiler closes the related valve and prevents gas flowing.

IMPORTANT: In first operating, in order sensor sense the heat, you should keep adjust knob in max position and keep after ignition 5-10 seconds. After normal burning, you may adjust desired flame position.

RECOMMENDATION IN USING GAS OVEN

1. Put the food to cook on the top rack, and adjust the valve to little flame position.
2. During cooking process, valve should be kept little flame position.
3. After cooking put the turn the valve to "0" position, and take the food out.

Warning 2: While your appliance working, ventilate the room continuously. It is important for your health.

While grilling, you should keep the oven door to the first phase and put the grill shield as shown in the figure. Otherwise, front control panel and knobs may be affected from heat and get yellowish color.

Cooking times:

During cooking oven door should not be opened frequently. Otherwise, heat dispersion can be irregular and cooking time may change. For cooking cake, cake pot should be used for efficacy.

7. USING OF ELECTRICITY OPERATED OVEN SECTION

After first operating, the appliance will emit a smell caused by isolation and heater elements' first using. In order to get rid of this smell, operate your appliance at 250 C for 45 minutes without cooking any thing.

For cooking in you oven, if there is timer, turn the timer knob in clockwise direction and choose the cooking time and heat.

Then your appliance will start, and then cooking timer knob will automatically returns to "0" position and, oven will turn off.

The oven operates continuously in "M" Manual position. You should manually turn off your appliance after cooking.

Kinds of Food you will cook

Cooking times

And thermostat positions are shown in cooking table.

The values in the table have been taken out of the tests, so they should be taken into account. However, you may search for different tastes in accordance with your desire.

While grilling, you should keep the oven door to the first phase and put the grill shield as shown in the figure. Otherwise, front control panel and knobs may be affected from heat and get yellowish color.

Cooking times:

During cooking, oven door should not be opened frequently. Otherwise, heat dispersion can be irregular and cooking time may change. For cooking cake, cake pot should be used for efficacy.

8. SUPPOSED COOKING TABLE


FOOD	HEAT /°C	POSITION OF RACK	COOKING TIME
PLEAT	150-170	2	30-35
FLAKY PASTRY	200-220	2	35-45
BISCUIT	160-170	3	20-25
COOKIES	160-170	3	20-35
CAKE	160-180	2	25-35
BRAIDED COOKIES	200-220	2	30-40
BRAIDED	180-200	2	35-45
FLAKY	160-180	2	20-30
LAMP	200-230	3	20-25
BEEF	200-230	3	30-40
LAMB	230-250	3	30-40
CHICKEN	230-240	3	30-40
FISH	200-220	3	20-30

Note: Data is the result of lab experiments


9 . MAINTENANCE AND CLEANING

1. Unplug the electric cord and turn the gas controller valve off.
2. Do not use hard brush, knife or other sharp edged tools etc. for cleaning the interior, control panel, door, trays and the other parts. Do not use deforming materials and detergents.
3. Clean the interior using soapy clothes, and then dry it with another soft cleaning cloth.
4. Clean the glass surfaces using special glass-cleaning materials.
5. Clean the top gas burners with soapy water and brush the gas tubes.
6. Do not use flammable materials such as acids, gasoline etc. for cleaning.
7. Do not wash any parts of the oven in dishwasher.
8. To clean the front door's glass cover, take the washers out using a screwdriver and take the inside glass out. Then wash and rinse. After drying, put the glass in the gasket properly and put it into its place.

 USE OF ELECTRONIC TIMER & PROGRAMMING (FOR MODELS WITH DIGITAL TIMER)

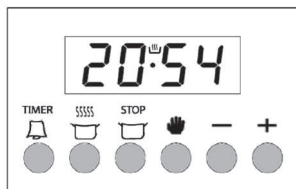
 



An electronic timer is module which enables your oven to get the food ready to serve at the desired time. The only thing to be done is to program the cooking time and ready time. It can also be used as an alarm clock, where you just give in the amount of time after which it should remind you by a buzzer tone.

When you connect the oven to the electric supply the 0.00 will be appear on the timer screen. At the same time the mark AUTO will blinks on the screen. In this position as the contacts of timer is open the oven does not operate. The heating elements supplied by electric currency through the timers contacts. If you desire to operate the oven manually,you have top push on the  buton.

 
The oven's timer works at the same principle with clock.In the absence of electric currency the timer should be reset again. When is not the defect of timer. In such cases the timer should be adjusted again.

TIMER OF DAY ADJUSTMENT



This adjustment can only made when no cooking program is in progress. Press the  button or  and  buttons together. Within 5 seconds, using **+** and **-** adjust the clock. Long presses of those buttons will result in fast changes.

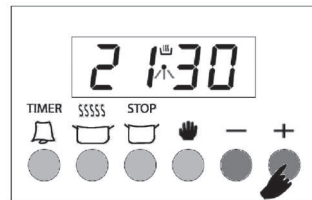

or



 
1) Press the  button.

1) Press the  and  buttons together.


2) Adjust the time using the + or – buttons.

ADJUSTING THE BUZZER ALARM


With this feature, you can program after how much elapsed time you should be warned by a buzzer sound.

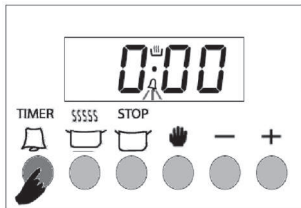

 
1) Switch into buzzer alarm mode.

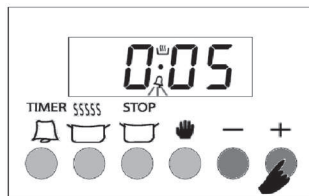

 
2) Give in the period of time to be counted down

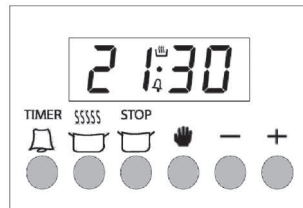


3) After a few seconds, screen will return to clock mode

Note: Once programmed, the remaining time can be seen by pressing the  button once

 CANCELLING THE BUZZER SOUND

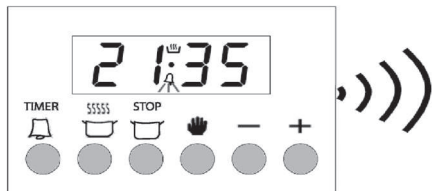

 1) Buzzer will sound after the programmed amount of time elapses.

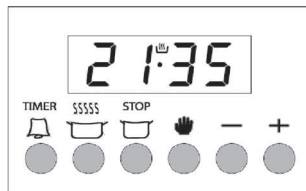


2) Press the ^{TIMER} button to cancel.


AUTOMATIC COOKING PROGRAM

If you want to start cooking immediately, you just have to give in the cooking time.

 
Example: We placed our food into the oven and want it to be cooked for 2 hours and 15 minutes

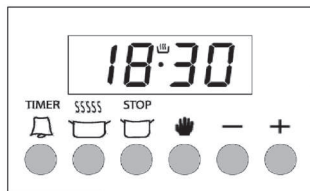

 
1) Current time is 18:30.

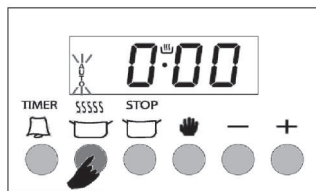

  
2) Switch into cooking time mode.

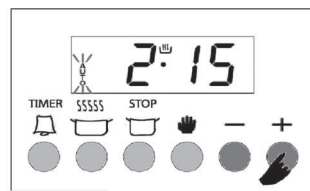

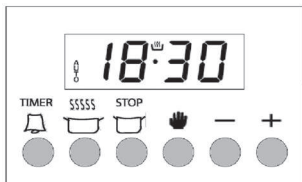

 
3) Adjust the cooking time using the + or – buttons.

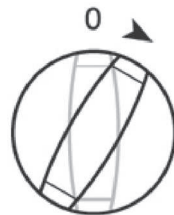


Now, you have programmed your oven to cook the food for 2 hours and 15 minutes. Please do not forget to bring the function and/or temperature knobs of your oven to appropriate position.



4) After a few seconds, the screen will indicate that cooking has started and show the current time

Note: You may cancel the automatic cooking mode any time by pressing the  button or  and  buttons together.

 
In the above example, cooking immediately started after giving in the cooking period. By pressing the  button, you can see the ready time, ie. the time when the food will be ready to serve, and if you want, you can also change it. In the example below, the ready time will be changed to 21:30.



1) Displayed is the ready time $18:30+2:15=20:45$.




2) Set it to the desired time by using the + or - buttons.

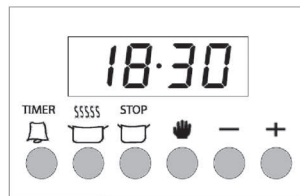


3) In a few seconds, screen switches to clock mode.

We now have programmed our oven to get the food ready at 21:30. Since the cooking time was preprogrammed as 2 hours 15 minutes, your oven will start cooking at 19:15, so that the food is ready at 21:30.

 Screen just when cooking starts

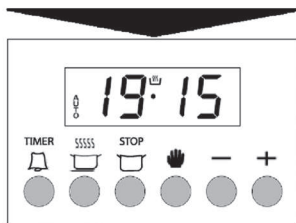

Screen just when cooking ends

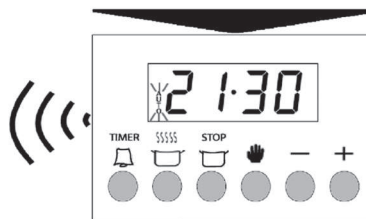 

When automatic cooking is completed, a buzzer alarm is heard and will sound, if not stopped, for 7 minutes.

 
1) Switch your oven OFF



2) Reset the timer.



or

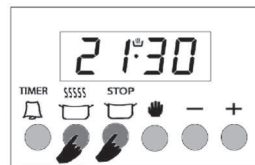

Note: Your oven will be inoperative until you reset the timer.

In the example shown, cooking time has been programmed first, the ready time was calculated automatically and was edited by us. It is also possible first to program the ready time, in that case the cooking time will be calculated automatically and should be edited thereafter.

BUZZER VOLUME ADJUSTMENT

You may adjust the buzzer tone of the timer in the following way:

- 1) Pressing and holding the '-' button, you can hear the current buzzer tone. Releasing and pressing again will switch to the next tone (3 different tones available)
- 2) The buzzer tone will be set to the last adjusted tone.

Note: As factory setting, the buzzer volume is set to the high tone. In case of a long power loss, the set buzzer tone will be this one.