 




NutriRise Blender

INSTRUCTION MANUAL

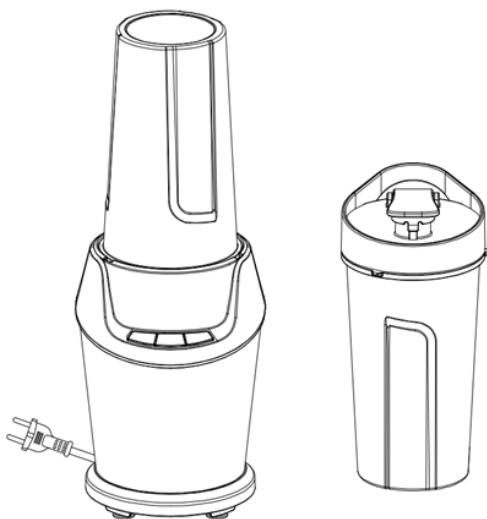

Model: RM/568

Read this booklet thoroughly before using and save it for future reference

IMPORTANT SAFEGUARDS

 
When using the electrical appliance, the below basic safety preCAUTIONs should be followed:

1. Read all instructions.
2. Before using check that the voltage power corresponds to the one shown on the appliance nameplate.
3. Do not let cord hang over edge of table or counter.
4. Do not place on or near a hot gas or electric burner, or in a heated oven.
5. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
6. Avoid contacting moving parts.
7. Do not leave foreign objects, such as spoons, forks, knives or the measuring cup, in the jug as this will damage the blades and other components when starting the machine and may cause injury.
8. Blades are sharp, so handle carefully.
9. The use of attachment, including jug, jug lid, not recommended or sold by manufacturer may cause fire, electric shock or injury.
10. The jug should not be more than 2/3 full when the tamper is left in while blending. Do not exceed 30 seconds of continuous blending with the tamper in place.
11. When making nut butters or oil based foods, do not process for more than one minute after the mixture starts circulating. Over-processing can cause dangerous overheating.
12. When blending hot liquids or ingredients, use caution: spray or escaping steam may cause scalding and burns. Do not fill container to the maximum capacity. Always begin processing on the lowest speed setting. Keep hands and other exposed skin away from the lid opening to prevent possible burns.
13. Turn all controls to OFF and unplug the blender when it is not in use, before putting on or taking off parts, and before cleaning.
14. Never leave the appliance unattended while it is running.
15. To protect against risk of electrical shock do not put motor unit or power cord in water or other liquid.
16. Keep hands and utensils out of jug while blending to reduce the risk of severe injury to persons or damage to the blender.
17. If scraping is necessary, turn the power OFF, unplug from the electrical outlet, and use a rubber spatula only.
18. Always operate blender with lid in place.

19. Never put non-food items into the jug to blend.
20. Do not open the lid before the blade stops running completely to avoid hazard.
21. Do not put hands or other objects into jug during working.
22. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
23. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
24. Children should be supervised to ensure that they do not play with the appliance.
25. Shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning
26. Do not use outdoors.
27. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
28. Save this instruction.


HOUSEHOLD USE ONLY

KNOW YOUR BLENDER

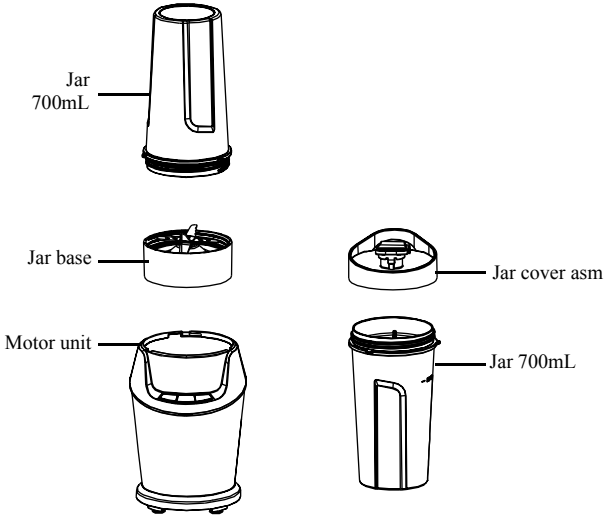


Use

 
ASSEMBLY

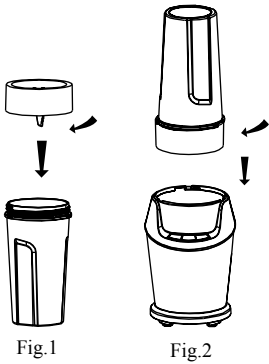

USE

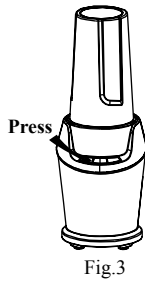 

REMOVAL

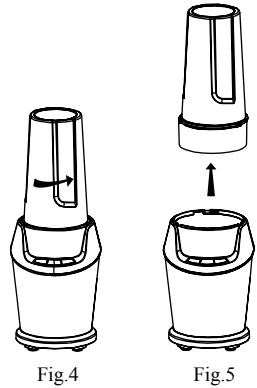 

IMPORTANT:

Place the motor base on a clean,dry,level surface such as a counter or table top.

1.Insert the plug into the power supply socket.

2.Pack the food material into the cup;

NOTE:Do not overfill!To avoid spilling,do not add ingredients past the“MAX”fill line.

3.Place the blade assembly onto the cup and twist it on tightly until you have a good seal.(Fig.1)

CAUTION: The blade is very sharp, please handle carefully.

4.Turn the cup upside down and place it onto the motor unit,aligning the tabs on the cup with the motor unit .turn it clockwise,until you feel it click into place.(Fig.2)

NOTE:The appliance will not start to work if the jar is not assembled onto the motor unit properly;

5.Press one of the buttons to activate .(Fig.3)

 
6.To remove the cup, ensure that the motor has stopped running.then turn cup counter clockwise (Fig.4)and pull straight up to remove.(Fig.5)

7.Turn the cup upright and remove the blade assembly by twisting the blade assembly counter clockwise.Be sure to store the blade assembly attached to an empty cup when not in use.

8.Twist the sip&seal lid onto the cup to enjoy your drink on the go.press flip top cap firmly into the opening to get the best seal.the flip top cap locks open when pressed backward.

9.Make sure that the motor base is unplugged when not in use.

Function switch

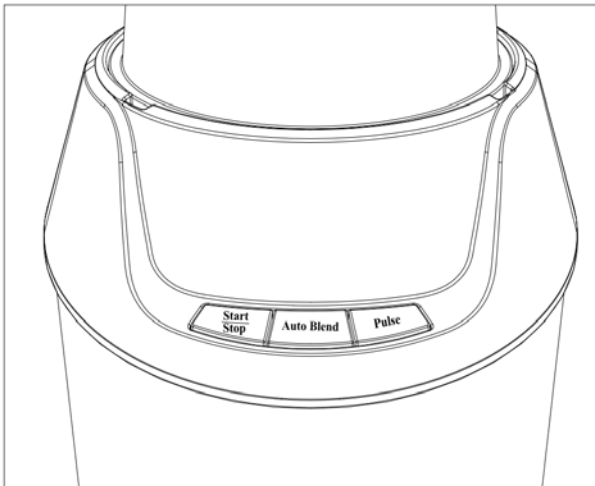

Start/Stop

Press once to start continuous running,press again to stop.

Automatic stop after 60 seconds.

Auto Blend

Pulse and blends fresh or softer ingredients to consistent results, timer counts down.

Stop the each time, can observe whether the agitation result attain the request or not.

Operation mode: open 3 seconds to stop 1 seconds to stop for a cycle,10 cycles after the automatic stop.

Pulse

Runs only while pressed down.Short presses make short pulses.

Timer counts up by seconds as long as pressed down.

OPERATION

Blend

1. Lay the appliance on the flat horizontal surface and make sure it is unplugged.
2. Prepare the carrots and cut them into cubes with a size of 15mm*15mm*15mm. And then remove the measuring cup and jug lid, after it, put the carrot cubes into the jug. Usually certain amount of purified water has to be added to facilitate the smooth running of appliance. The proportion of the carrot and water is 2:3. The amount of mixture should not exceed the max level as indicated on the jug. Place the blade assembly onto the cup and twist it on tightly until you have a good seal.
3. Connect the appliance with power source, Press“**Start/Stop**” press key;
4. Automatic stop after 60 seconds.

NOTE:

The max operation time per time shall not exceed 1 minutes and minimum 10 minutes rest time must be maintained between two consecutive cycles. And the appliance must rest for at least 10 minutes every 10 cycles.

Crushed ice

1. Lay the appliance on the flat horizontal surface and make sure it is unplugged.
2. Prepare the ice and cut them into cubes with a size of 15mm*15mm*15mm. Quantity not more than 10, into a 700mL cup.Place the blade assembly onto the cup and twist it on tightly until you have a good seal.

3. Connect the appliance with power source, Press“**Start/Stop**” press key;
4. Need to work for more than 30 seconds.

NOTE:

The max operation time per time shall not exceed 1 minutes and minimum 10 minutes rest time must be maintained between two consecutive cycles. And the appliance must rest for at least 10 minutes every 10 cycles.

Grind

1. Lay the appliance on the flat horizontal surface and make sure it is unplugged.
2. Prepare 100g roasted coffee beans, and then remove the measuring cup and jug lid and put the roasted coffee beans into the jug, after it, close the jug lid and measuring cup well in position.

Note: The maximum capacity of food to be grinded must not exceed 100g.

3. Connect the appliance with power source, Press“**Start/Stop**” press key;
4. Need to work for more than 30 seconds.

NOTE:

The max operation time per time shall not exceed 1 minutes and minimum 10 minutes rest time must be maintained between two consecutive cycles. And the appliance must rest for at least 10 minutes every 10 cycles.

CLEANING AND MAINTENANCE

The Auto-Clean feature can help to clean the blender and blade assembly easily and rapidly in complete safety.

- After use, remove the jar from the motor unit and rinse the jar under running water.
- Wiping the outer surface of motor unit with a damp cloth, do not use abrasive cleansers. Never immerse in water or other solution for cleaning.
- All parts except the motor unit and jar base are dishwasher-safe. You can also wash the parts, except the motor unit and jar base, in warm, soapy water.

-Dry all parts and then reassemble them again. But store the appliance with the jug lid not be closed completely to allow air to circulate and prevent jug odors.

-If any problem has been encountered during use, never disassemble the Motor Unit by yourself, there are no user serviceable parts inside. Contact only the authorized service facility for examination and repair.

NOTE:

-The jar base can not be placed in the dishwasher to clean.

WARNING:

- 1) The blade is very sharp, handle carefully when clean.
- 2) Do not use abrasive cleaners. Never immerse the Motor Unit in water for cleaning

ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment!
Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center.