



Instruction Manual

Sandwich Toaster



Model: RM/114

Please read the instruction booklet carefully before using and save it for future reference.

Instructions for use

Important. Please read before use and retain for future reference

IMPORTANT SAFETY INSTRUCTIONS:

When using electrical appliances, basic safety precautions should always be followed, including the following.

1. Before you put the plug into the socket, please check that the type of current and mains voltage correspond to the instructions on the nameplate on the underside of the appliance. If this is not the case, consult your dealer and do not use.
2. Read and retain all instructions for future reference.
3. To protect against risk of electric shock, do not immerse the appliance, the cord, plug or Sandwich Maker in water or any other liquid.
4. If this appliance falls into water, “unplug it” immediately. **DO NOT TOUCH THE WATER.**
5. Always “unplug it” immediately after using.
6. Close supervision is necessary when it is being used near children.
7. The flex must be fully extended during use.
8. Do not operate the appliance with a damaged cord, plug, or it is not working properly, return it to your dealer or consult a qualified electrician so as to avoid any risk or danger.
9. Ensure the main cable does not hang over sharp edges and keep it away from hot objects and open flames. Only pull it out of the socket by the plug, not by the cable. Do not pull, twist, or wraps line cord around appliance.
10. Never block the air openings of the appliance. Place the unit on a stable level and heat-resistant surface, Do not place on or near a hot gas, electric burner or in a heated oven. Do not place under curtains or low wall-cupboards.
11. Caution! Danger of burns! The outside surface of Sandwich Maker becomes hot during use. Do not touch hot surface and hold it by the handle only.
12. Oversize foods, metal foil packages or utensils must not be inserted in a toaster as they may cause fire or electric shock..
13. Do not use sandwich toaster with a damaged outlet.
14. If this appliance has switched off automatically or has been switched off manually, it may need time to cool down for 10-15 minutes before restarting.
15. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
16. Keep the appliance and its cord out of reach of child less than 8 years.

17. The temperature of accessible surfaces may be high when the appliance is operating.
18. The surfaces are liable to get hot during use.
19. This appliance includes a heating function. Surfaces, other than the functional surfaces may develop high temperatures. Since temperatures are perceived differently by different people, this device should be used with CAUTION. Hold the appliance exclusively to grip surfaces intended to hold and use such heat protection measures as heat protection Gloves or pot holders. Areas which are not intended to grips must be given sufficient time to cool.
20. The appliances are not intended to be operated by means of an external timer or separate remote-control system.
21. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its services agent.

WARNING:

- Do not use this appliance near water.
- To Prevent electric shock disconnect from the mains before removing the cover.
- The unit must be earthed and must be disconnected from the mains when not in use. Do not allow the unit to be exposed to rain or moisture.
- A damaged toasted sandwich maker should not be used until examined by a qualified service centre.
- Any examination, repair or adjustment for the appliance should be made by the authorized service agent.
- Incorrect operation and improper handling can lead to faults on the device and injuries to the user.
- Appliance is only to be used with the stand provided. If a replacement is required only approved components may be used.

CONTROLS AND FEATURES:



Technical Specification:

Voltage: 230V~50Hz

Power: 700W

INSTRUCTIONS FOR USE:

1. Before plugging in your sandwich maker, check the voltage and type of plug that is required for your location. This appliance is at 230Volt position and was set at the factory to operate at 230 volts.
2. To Avoid circuit overload, do not operate another high wattage appliance on the same circuit.
3. Clean all of the surfaces on the toasted sandwich maker with a damp cloth and wipe dry.
4. Place the unit on a flat stable surface.
5. Ensure that the supply cord does not touch the toasting plates.

Operation:

1. Plug the power cord into the cord socket.
2. During first use there may be a small amount of smoke and a strange smell, this is not a fault and will clear within minutes.
3. Preheat the sandwich toaster for 5-8 minutes, red heating indicator will come on to show that the unit is heating up. When the light switches off the ready green indicator will come on. The toasted sandwich maker is now ready to use.
4. Coat the inner plat of the unit with cream or butter to prevent sticking.
5. After preheat, open the sandwich toaster, place a piece of bread of 1cm thickness on inner lower plate, coat one side of the bread with butter and place on the plate (butter side down)
6. Place the ingredients onto the dry side of the bread.
7. Place the remaining slice of bread (butter side up) over the ingredients and closed the lid. Make sure the lid is locked into place.
8. During use the indicator lights will cycle on and off as the unit maintains the correct toasting temperature.
9. After 3-4 minutes, check the toasted sandwich, when toasted to your liking.
10. Sandwich toaster can also be stopped at any time by unplug the power cord out of the cord socket.

Caution:

- When it is difficult to close the machine, it means that the filling is too much. You can not close the machine with difficulty, otherwise the damage will happen. Should reduce the filling or replace the the thicker bread.
- When take the bread out from the machine, do not use the sharp unit such as knife and fork. Should use the heat-resisting plastic or wooden spatula to avoid damaging the nonstick surface.

MAINTENANCE AND CLEANING:

WHILE USING: Untwist cord from time to time to avoid tangling.

1. Wait for the toasted sandwich maker to cool down before cleaning, moving or storing.
2. Wipe outside with soft dry cloth when sandwich toaster is cold, never use metal polish.
3. It is better to clean up and remove the bread crumbs after use the sandwich toaster.
4. Make sure the garbage is completely removed before using the sandwich toaster again.
5. Never attempt to remove bread which has jammed in the slots without unplugging the sandwich toaster from the electrical outlet first, be sure not to damage the internal mechanism or heating elements when removing bread.
6. Do not immerse the appliance in the water or any other liquid.

Environment friendly disposal



You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working

electrical equipments to an appropriate waste disposal centre

