



CORDED KETTLE
INSTRUCTION MANUAL



MODEL: RM/115

Read this booklet thoroughly before using and save it for future reference

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using.
- Before connecting the kettle to the power supply, check that the voltage indicated on the appliance (underneath the kettle & base) corresponds with the voltage in your home. If this is not the case, contact your dealer and Do Not Use The Kettle.
- Do not operate the appliance without anything in it to avoid damaging the heat elements.
- Unplug the kettle from the outlet when not in use and before cleaning. Allow the kettle to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not let the cord hang over the edge of a table or counter or touch a hot surface.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- Should you accidentally allow the kettle to operate without water, the boil-dry protection will automatically switch it off. If this should occur, allow the kettle to cool before filling with cold water and re-boiling.
- Ensure that the kettle is used on a firm and flat surface out of reach of children, this will prevent the kettle from overturning and prevent damage or injury.
- To protect against fire, electric shock or personal injury, do not immerse cord, electric plugs or kettle in water or other liquids.
- Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.
- Be careful when opening the lid for refilling when the kettle is hot.
- Close supervision is necessary when any appliance is used by or near children.
- Do not touch the hot surface. Use the handle or the button.
- Extreme caution must be used when moving an appliance containing hot water.

- The appliance is not a toy. Do not let children play with it.
- The use of accessory attachments that are not recommended by the appliance manufacturer, may result in fire, electric shock or personal injury.
- While water is boiling, or just after the water has finished boiling, avoid contact with steam from the spout.
- To disconnect, turn any control to “off,” then remove plug from wall outlet.
- Scalding may occur if the lid is removed during the brewing cycles.
- Always ensure the lid is closed and do not lift it while the water is boiling.
- If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent
- Do not use the appliance for other than intended use.
- If the kettle is overfilled, boiling water may spill out.
- The kettle is for household use only, not for outdoor use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- Save these instructions.

Description



Before using your kettle

If you are using the kettle for the first time, it is recommended that you clean your kettle before use by boiling a full kettle of water twice and then discarding the water.

Note: The max capacity is 1.8L.

Operation of your kettle

1. To fill the kettle, open lid by pressing and uplifting the open lid button, fill with the desired amount of water to the water kettle. Always fill the kettle between the minimum and maximum marks. Too little water will result in the kettle switching off before the water has boiled.

NOTE: Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Ensure that the lid is firmly in place before connecting the power cord to the outlet.

2. Insert the power cord firstly into the power socket of the kettle, then connect the power cord to wall outlet. Make sure the connection is completely.

3. Turn to the switch to the “I” position, the indicator will light up. Then start to boil the water. The kettle will switch off automatically once the water has boiled. You can shut off the power by pressing the switch to the “O” position at any moment during boiling water.

NOTE: Ensure that switch is clear of obstructions and the lid is firmly closed, The kettle will not turn off if the switch is constrained or if the lid is left open.

4. Unplug from the wall outlet firstly and remove the power cord from the kettle.

Note: make sure the connector of power cord and inlet of kettle must be dried before the appliance is used again.

5. Lift the kettle and then pour the water.

NOTE: operate carefully when pouring the water from your kettle as boiling water may result in scald, besides, don't open the lid while the water in the kettle is hot.

5. The kettle will not re-boil until the switch is pressed downward. Allow to cool for 15~20 seconds before reopening to boil water.

NOTE: Ensure power supply is turned off and power cord is taken down when kettle is not in use.

Boil-dry protect

Should you accidentally allow the kettle to operate without water, the boil-dry protection will automatically switch it off. If this should occur, allow the kettle to cool before filling with cold water and re-boiling.

Cleaning and maintenance

Always disconnect the appliance from the power outlet before cleaning.

1. Never immerse the kettle, power cord in water, or allow moisture to contact with these parts.
2. Wipe the appearance of body with a wild and damp cloth or cleaner, never use a poisonous cleaner.


CAUTION: Do not use chemical, steel, wooden or abrasive cleaners to clean the outside of the kettle to prevent the gloss loss.

Removal of mineral deposits

Your kettle should be periodically descaled as the mineral deposits in tap water may form scale on the bottom of kettle so as to cause the operation less efficiency. You can use the commercially available descaler and follow the instructions on the package of descaler. Alternatively, you may follow below instructions using the white vinegar. Fill the kettle with 3 cups of white vinegar, then adding water to the amount so as to cover the bottom of kettle completely. Leave the solution in the kettle overnight .

Then discard the mixture in the kettle, then filling the kettle with clean water, boiling and then discard the water. Repeat several times until the odor of vinegar has been flushed away. Any stains remaining inside the spout can be removed by rubbing with a damp cloth.

Environment friendly disposal

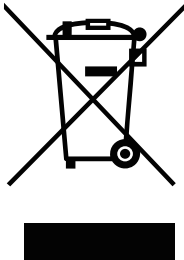

You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center.

