



COFFEE MAKER INSTRUCTION MANUAL



RM/193

Read this booklet thoroughly before using and save it for future reference

Important Safeguards

When using electrical appliance, the following basic safety precautions should always be followed:

1. Please read these instructions carefully before using the appliance.
2. Check that your mains voltage corresponds to the one stated on the appliance.
3. Never leave the appliance unsupervised when in use. Keep out of reach of children or incompetent persons.
4. Only use the appliance for domestic purposes and in the way indicated in these instructions.
5. Never use the appliance near hot surfaces.
6. To protect against electric shock, do not place cord, plugs, or appliance in water or other liquid.
7. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
8. Unplug unit from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
9. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner, return appliance to the nearest authorized service facility for examination, repair or adjustment.
10. Never use the appliance outside and always place it in a dry environment.
11. Never use accessories which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
12. Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way. Do not wind the cord around the appliance and do not bend it.
13. Do not let cord hang over edge of table or counter, or touch hot surfaces.
14. Stand the appliance on a table or flat surface.
15. Only use fresh (potable) and cold (moderate) water. Do not use water

contained in bathtubs, washbasins or other recipients.

16. Make sure the cord never comes into contact with the hot parts of the appliance.
17. Never touch the hot parts of the appliance (be careful, also the warming plate is a hot part !), only touch the plastic parts and the jug by the handle.
18. Be careful not to get burned by the steam evaporating from the coffee filter.
19. The glass carafe is designed for use with this appliance it must never be used on a range top.
20. Do not set a hot container on a set or cold surface.
21. Do not use a cracked carafe or a carafe having a loose or weakened handle. Handle with care as the glass is very fragile.
22. Do not clean carafe with cleansers, steel wool pads, or other abrasive material.
23. Never use your coffee maker without water in it.
24. Never place the empty (or almost empty) coffeepot on the hotplate when the coffee machine is operating, or on any other hot surfaces.
25. Do not forget that the temperature of the coffee prepared is high. Handle with care your coffeepot to avoid any risk of splashes.
26. Save this instruction for future use.
27. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
28. Children should be supervised to ensure that they do not play with the appliance.
29. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.

Operation

1. Pull the front tip of water tank cover and fill in clean water to desired level. Make sure the water can not exceed the max level as marked on the water window.
2. Place the filter paper on the funnel or use the permanent filter and then add adequate quantity of ground coffee in the filter, that is depended on the water level and your personal favor.
3. Close the tank cover and place the carafe on the warming plate.
4. Connect the supply cord to outlet and switch on, the indicator lamp will light up and the coffee maker begin brewing. For the full capacity water, generally it will take 12 minutes to finish the brewing period. The coffee is ready to serve when the brewed coffee is delivered to the glass carafe. If it is not served immediately and the coffee will be keeping warm automatically until you switch off the appliance or disconnect the power supply.

Cleaning

1. Disconnect the power supply and let the coffee maker completely cool down before cleaning.
2. Discard the paper filter and brewed ground coffee and immerse the glass carafe in warm soapy water and then rinse it under running water. Never place the glass carafe in the dishwasher for cleaning.
3. Wipe outside with soft dry cloth, never use metal abrasive cleaner to wash outside surface. Never immerse the body into water for cleaning.
4. If you obviously feel the brewing period is longer than before, that means the coffee maker needs descaling. For easier descaling, add several drops of vinegar together with water and brewing several times.