


Ramtons Stand Blender MODEL: RM/246 INSTRUCTION MANUAL

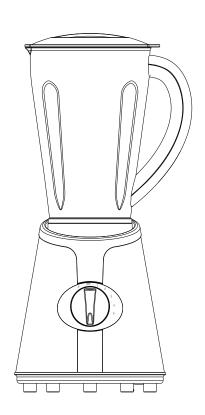


IMPORTANT SAFEGUARDS

When using this electrical appliance, the following basic safety precautions should be followed:

- 1. Read all instructions.
- 2. Before using check that the voltage power corresponds to the one shown on the appliance nameplate.
- 3. Do not let the cord hang over edge of table or counter.
- 4. Do not operate any appliance with a damaged cord or plug or after the appliance malfunction or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
- 5. Not to be used by Children or disabled persons unless under strict supervision.
- 6. Avoid contacting moving parts.
- 7. Blades are sharp, so handle carefully.
- 8. The use of attachments, including jug, lid, not recommended or sold by manufacturer as this may cause fire, electric shock or injury.
- 9. The appliance cannot be used for blending hard and dry substances, otherwise the blade would be blunted.
- 10. Switch off the appliance before approaching parts which move while in use.
- 11. Turn off switch to 0 position after each use. Make sure the motor stops completely before disassembling, and the power supply cord plug is removed from outlet.
- 12. Do not immerse the Motor Unit into water or other liquids.
- 13. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
- 14. Children should be supervised to ensure that they do not play with the appliance.
- 15. Do not use outdoors.
- 17. Save these instructions

HOUSEHOLD USE ONLY

Know your juicer

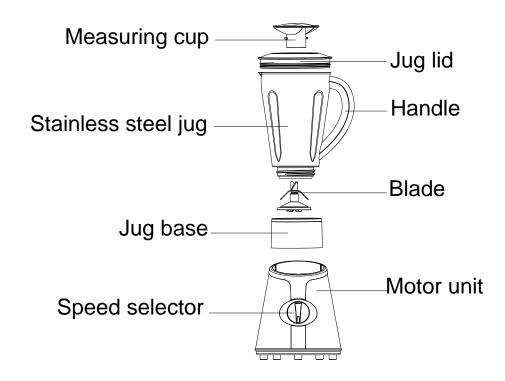

For the initial use

- 1. Unpack the appliance and place all parts on a horizontal surface.
- 2. Immerse stainless steel jug, lid, jug base, blade ass'y, measuring cup in warm soapy water and rinse them and dry. Never immerse motor unit in water for cleaning to prevent the risk of electric shock.

Caution: the blade is very sharp, handle with great care.

3. The correct assembly way will be described in detail in below sections.

Before assembling the stainless steel jug, be sure the power cord is unplugged from the power outlet and the speed selector is on the OFF position.

The juicer jug is suitable for making mixture which the juice and pulp are mixed.

For attaching stainless steel jug, firstly place the blade ass'y into the jug base properly, then place the jug into the jug base properly, fix the jug base with one hand, and the other hand turns the jug in clockwise until it locks in place (see fig.1). Then place the jug and jug base together into the motor unit (see fig.2).

Note: make sure all the assembly is proper. The appliance will not operate if any case of the following occurs, as the safety interlock device is non-effective.



- 1. The assembly between the stainless steel jug and the jug base is not proper. The interlock device is non-effective.
- 2. Without the stainless steel jug, only the blade and jug base are assembled into the motor unit.

Blending fruit and vegetable:

- 1. Before attaching the power cord into the outlet, make sure the speed selector is in the OFF position.
- 2. Peeled or cored the fruit or vegetables and then cut it into small dices, put the food piece into the jug. Usually certain amount of Fig.2 purified water has to be added to facilitate the smooth running of appliance. The proportion of the food and water is 2:3. The amount of mixture should not exceed the max level as indicated on the jug.

Note: never use boiling liquids or run the appliance empty. The stainless steel jug can be used for breaking up ice.

- 3. Replace the lid on the jug. Only directly place the lid into the jug.
- 4. Turn the speed selector to the desired setting, there are seven setting: P, OFF, 1, 2, 3, 4, 5. The 1 setting is the lowest speed, the 5 setting is the highest speed. Turn switch to P position and hold it to pulse actuate motor for delicate chopping. Release it to return the OFF position.
- 5. You may add ingredient into the jug through the center opening of jug lid during operation, then replace Measuring Cup if necessary. Let the tab of Measuring Cup aligns with the groove of jug lid, put down and turn anti-clockwise until it is locked.
- 6. The consecutive operation time shall not exceed 3 minutes and only wait until the unit is cooled to room temperature before performing next operation cycles.
- 7. Turn the Speed control knob to OFF Position once the mixture has been blended to your desired consistency.
- 8. Remove the jug base with jug from the Motor Unit (only remove it by lifting handle directly), carefully take down the jug lid, then pour and serve.

Cleaning and Maintenance

The Auto Clean feature can clean the juicer and blade assembly easily, rapidly in complete safety.

- -Pour a little warm soapy water into the stainless steel jug and turn the Speed Selector to P position for a few seconds.
- -Remove the jug from the jug base by turn the jug in anti-clockwise and rinse the jug, jug base, blade ass'y under running water.
- -Wipe the outer surface of Motor Unit with a damp cloth, do not use abrasive



cleansers. Never immerse in water for cleaning

-Dry all parts and then replace them

For complete cleaning, you can put jug lid, Measuring Cup, stainless steel jug, blade assembly, jug base into Dishwasher for clean, they are dishwasher safe components, but the temp setting shall not exceed 70°C

If any problem has been encountered during use never disassemble the Motor Base by yourself, no user serviceable parts inside. Contact only the authorized service facility for examination and repair.

Environment friendly disposal



You can help protect the environment! Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal centre.