

OPERATION INSTRUCTION

Model No.: RM/250 240V~50Hz 1200W

Model No.: RM/337 240V~50Hz 1200W

Model No.: RM/253 240V~50Hz 2400W

Model No.: RM/390 240V~50Hz 2400W

Thank you for your purchase of our electric hot plate. To use this hot plate properly and safely, please read the following instructions carefully.

PREPARATION BEFORE USE

1. Clean the hot plate with a soft damp cloth. Place your hot plate on the level and stable surface near the electrical socket.
2. Check that the voltage marked on the product corresponds with your supply voltage. Ensure the controller is in the "OFF" position before plug in.
3. Always use flat bottom saucepans or containers that make close contact with the heating element. Ideally, the saucepans or containers should be 185 ~ 200mm in diameter. Keep the surface of the heating element clean and dry.

OPERATION

1. Put water and/or food in the container (The total amount of water and /or food should not exceed 80% of the container to avoid overflowing), put a lid on the container and place it on the Infrared cooker.
2. Connecting to the power supply socket. Turn the switch from "OFF" TO "ON" position and the indicator light is on for working, the hot plate is in a state of heating.
3. Two points to be **remembered** by the user when using the new Infrared cooker:
 - a) When using this hot plate for the first time, there may be a smell of smoke coming from the surface of the heating element. This is normal because of the invisible protective coating in production.
 - b) Before the water **boils**, the indicator light on the hot plate may temporary **go** off due to the temporary disconnection of the thermostatic control. This is a safety issue for the working on the Infrared cooker.

4. When you have finished using the Infrared cooker, turn the switch to "OFF" position and unplug it from the socket. Wait until the appliance is completely cooled down before moving or cleaning.

MAINTENANCE & CARE

1. Make sure the plug is removed from the power supply socket. After the hot plate set is completely cooled down, clean it with the mild cleaner or gel-like cleaner by using soft cloth.
PLEASED DO NOT CLEAN THE SET WHEN IT IS STILL HOT.
2. **DO NOT USE** hard brushes, scratchy materials and/or alcohol, petrol or any organic cleaner for the cleaning purpose
3. Except the removable frying pan, do not immerse the main body in water to clean.
4. Put the hot plate on a cool place right after the cleaning.

IMPORTANT SAFEGUARDS

1. CORRECT USE OF ELECTRICITY
 - a) To prevent the risk of electric shock, **DO NOT USE** the set with broken power supply wires or broken plug. All repair works must be made by a professional (authorized distributor). **NEVER TRY TO REPAIR** the cable or plug by yourself. Please take the damaged set to your local authorized maintenance center
 - b) **Must be used** flat bottom pot and not filled full into the pot when using, the using time can not over 1 hour.
 - c) Use of an extension cord is not recommended as it may overheat and cause risk of fire. However, if an extension cord must be used, the cord should be 1.5mm² standard.
 - d) To prevent overloading and blowing fuses, ensure that no other high power appliance is plugged into the same socket, or another socket which is connected in the same circuit.
 - e) **DO NOT PUT** the cord under the carpet, blankets. Always keep the power cable away from walkway in room.
 - f) **DO NOT TRY TO REPAIR** the broken fuse by yourself, the user should take the set to your local authorized maintenance center to replace it with the new one.
2. SAFETY IN OPERATION
 - a) **DO NOT OPERATE** this hot plate near water sources or flammable liquids.
 - b) **DO NOT OPERATE** this hot plate on or near any hot surface. (Infrared cooker;

electric stoves etc).

- c) Always operate this from an earthed domestic 220-240V~50Hz power socket.
- d) Ensure the hot place is placed on a stable, secure surface to eliminate the possibility of tipping over or avoid any water in the appliance.
- e) Closed supervision is necessary when this hot plate is used by children. Never operate this appliance unattended.
- f) Never try to touch the hot surface of this hot plate before it is cooled down.