



RAMTONS TOASTER
INSTRUCTION MANUAL



RM/258

Read this booklet thoroughly before using and save it for future reference

IMPORTANT SAFEGUARD


When using electrical appliance. Basic safety precautions should always be followed including the following:

1. Read all instruction.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the toaster.
3. Do not touch hot surface. Use handles or knobs only.
4. To protect against electrical shock, do not immerse cord, plug, or any part of the toaster in water or other liquid.
5. Close supervision is necessary when it is used by or near children.
6. Unplug unit from outlet when not in use and before cleaning.
7. Do not operate any appliance with a damaged cord or plug, or in abnormal state. If its main cord is damaged, it must be replaced by the manufacturer , the nearest service agent or a qualified person.
8. Do not let the cord hang over edge of table or counter, or touch hot surface.
9. Do not place on or near a hot gas or electric burner, or in a heated oven.
10. Do not use the appliance for other than its intended use.
11. Oversize food, metal foil packages or utensils must not be inserted in the toaster as they may cause fire or electric shock.
12. Bread may burn, therefore toasters must not be used near or below curtains and other combustible materials, they must be watched.
13. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
14. Don't attempt to dislodge food when toaster is in operation.
15. Be sure to take the bread out carefully after toasting so as to avoid injuries.
16. This appliance has been incorporated with a grounded plug. Please ensure the wall outlet in your house is well earthed.
17. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
18. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
19. Children should be supervised to ensure that they do not play with the appliance.
20. Don't use the appliance outdoors.
21. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
22. Save these instructions.

Product introduction



Control panel :

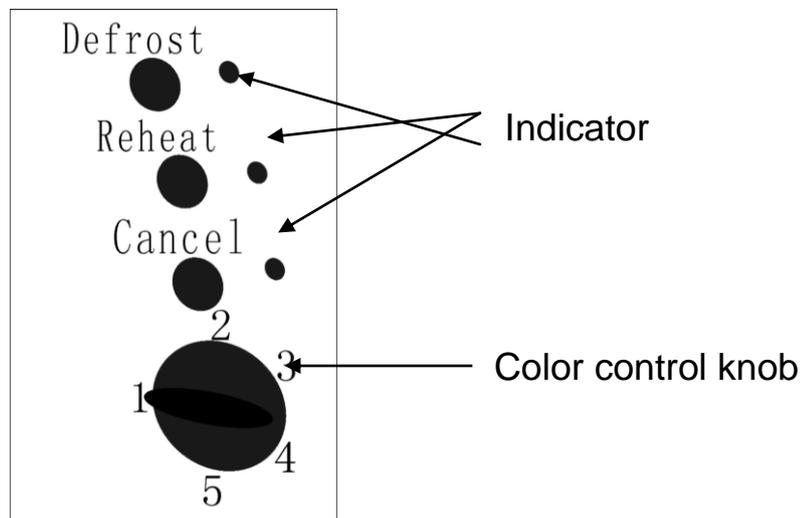

For the first use

As there is manufacturing residue or oil remained in the toaster or heat element, it usually will emit the odors for the first use. It is normal and will not occur after several times use, for the first use it is suggested to operate according to the below steps, except without bread. Then let the toaster cool down and begin toasting the first slice.

Operation:

1. Put bread slice into the bread slot, it can be inserted two slices at most every time (see fig.1). If only toasting one side or irregular bread, the bread must be put on the toast rack, only toast one piece every time. When toasting on the toast rack, press rack control handle to make the toast rack uplift, then put the bread on the toast rack (see fig.2). Lift the rack control handle to reset the rack when do not use.

Note: 1. Make sure the crumb tray is completely positioned in place before using.

2. Before toasting on the toast rack, let the appliance cool down.



Fig.1



Fig.2

2. Plug the power cord into the outlet.
3. Set color control knob to your desired color. There is 5-position level, the lowest is set white and the highest is dark. The “3” position of control knob can toast the bread to golden color.
 - Note:** 1. Toasting color for one slice is darker than that for double bread at the same level.
 - 2. If toasted continuously, toasting color for the latter bread is darker than that for the anterior bread at the same level.
4. Press carriage handle down vertically until the lamp beside the “**Cancel**” button is illuminated, and toasting will begin at once. Once the bread has been toasted to the preset color, the carriage handle will be automatically sprung up.
 - Note:** 1. Toasting process can be terminated at any time by pressing the “**Cancel**” button.
 - 2. Only the power supply is switching on, the carriage handle can rest on the bottom of slot.
5. During the toasting process, you may observe the toast color, if it is satisfying; you press the “**Cancel**” button to cancel the operation at any time.
6. Once the bread have been toasted to the preset color, the carriage handle will automatically spring up, Also you can uplift the carriage handle a little to remove the bread readily (see fig.3).
7. If the bread has been taken out from refrigerator, press “**Defrost**” button and the lamp beside it will be illuminated, in this mode it will be toasted to your desired color.
8. If you want to reheat the cold toasted bread, press the “**Reheat**” button and the lamp beside it will be illuminated. In this mode toasting time is fixed, so long as time is running over, the carriage handle will automatically spring up and end up the reheating process.



Fig.3

Caution:

1. If toaster starts to smoke, Press “**Cancel**” to stop toasting immediately.
2. Remove all protective wrapping prior to placing in toaster.
3. Avoid toasting the food with extremely runny ingredients such as butter.
4. Never attempt to remove bread jammed in the slots without unplugging the toaster from the electrical outlet first, Be sure not to damage the internal mechanism or heating elements when removing bread.
5. The bread slot is only applicable for toasting regular bread slice, Like the irregular bread or round bread, you can toast it on the grill rack.

Cleaning and maintenance:

1. Disconnect from AC outlet before cleaning.
2. Wipe the outside with soft dry cloth after toaster cools down, never use metal polish.
3. Pull out crumb tray on bottom of toaster and empty it. If toaster is used frequently, accumulated bread crumbs should be removed at least once a week. Make sure the crumb tray is completely closed before using the toaster again.
4. When not in use or under storage, the power cord may be wound under the bottom of toaster.