 




# **CORDLESS KETTLE**

**MODEL: RM/263**

# **INSTRUCTION MANUAL**

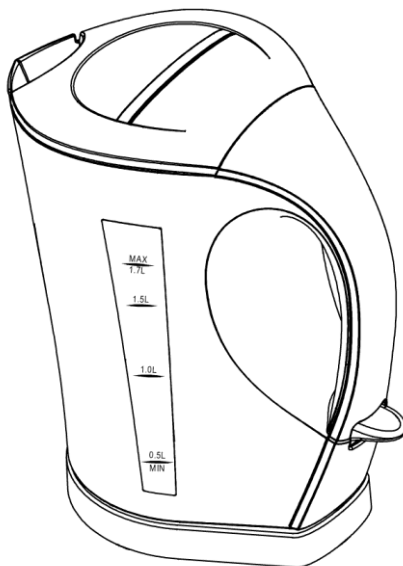

Read this booklet thoroughly before using and save it for future reference

Made in China for Hypermart Limited

 
# **IMPORTANT SAFETY INSTRUCTIONS**

1. Read all instructions before using.
2. Before connecting the kettle to the power supply, check that the voltage indicated on the appliance (underside the kettle & base) corresponds with the voltage in your home. If this is not the case, contact your dealer and do not use the kettle.
3. The attached base can not be used for other than intended use.
4. Do not operate the appliance without load to avoid damaging the heat elements.
5. Unplug from the outlet when not in use.
6. Do not let the cord hang over edge of table counter or touch hot surface.
7. Do not place on or near a hot gas or electric burner or in a heated oven.
8. Should you accidentally allow the kettle to operate without water, the boil-dry protection will automatically switch it off. If this should occur, allow the kettle to cool before filling with cold water and re-boiling.
9. Ensure that kettle is used on a firm and flat surface where the children can't touch, this can prevent from overturning the kettle to damage the person or kettle.
10. To protect against a fire, electric shock or personal injury, do not immerse cord, electric plugs or kettle in water or other liquids.
11. Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.
12. Be careful when opening the lid for refilling when the kettle is hot.
13. Close supervision is necessary when any appliance is used by or near children.
14. Do not touch the hot surface. Use the handle or the button.
15. Extreme caution must be used when moving an appliance containing hot water.
16. The appliance is not a toy. Do not let the children play it.

17. The use of attachments that are not recommended by the appliance manufacturer may result in fire, electric shock or personal injury.
18. While boiling water, avoid to contact steam from the spout when water is boiling or just after it has switched off. Do not be anxious to uncover the lid.
19. Unplug from outlet when not in use and before cleaning; Allow it to cool before putting on or taking off parts and before cleaning the appliance.
20. Always ensure the lid is closed and do not lift it while the water is boiling. Scalding may occur if the lid is removed during the brewing cycles.
21. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
22. Do not use the appliance for other than intended use.
23. Do not move the unit while the kettle is switched on.
24. The kettle can only use with the stand provided.
25. If the kettle is overfilled, boiling water may be ejected.
26. Do not use the kettle outdoors.
27. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
28. Children should be supervised to ensure that they do not play with the appliance.
29. This appliance is intended to be used in household and similar applications such as:
  - Staff kitchen areas in shops, offices and other working environments;
  - Farm houses;
  - By clients in hotels, motels and other residential type environments;
  - Bed and breakfast type environments.
30. Save these instructions.

31. This appliance has been incorporated with a grounded plug. Please ensure the wall outlet in your house is well earthed.

## Know your kettle

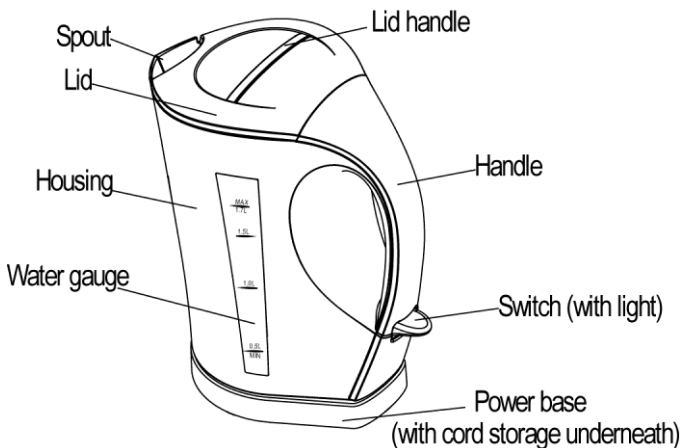

## Before initial use

If you are using the kettle for the first time, it is recommended that you clean your kettle before use by boiling a full kettle of water twice and then discarding the water.

## Operation

1. To fill water into the kettle, remove it from the power base and open the lid by lifting the lid handle, fill with the desired amount of water to the kettle. Always fill the kettle between the minimum (0.5L) and maximum (1.7L) marks. Too little water will result in the kettle switching off before the water has boiled.

**NOTE: Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Ensure that the lid is firmly in place before connecting the power cord to the outlet.**

2. Close the lid. Position the kettle on the power base in place. Make sure the kettle contact with the power base completely.
3. Connect the plug into a power outlet. Press down the switch to “1” position and the switch light illuminates. Then start to boil the water. The kettle will switch off automatically once the water has boiled and the switch light extinguishes. You can shut off the power by pressing the switch at any moment during boiling water.

**NOTE: Ensure that switch is clear of obstructions and the lid is firmly closed. The kettle will not turn off if the switch is constrained or if the lid is left open.**

4. Lift the kettle from the power base and then pour the water.

**NOTE: Operate carefully when pouring the water from your kettle as boiling water may result in scald, besides, don't open the lid while the water in the kettle is hot.**

5. The kettle will not re-boil until the switch is uplifted. Allow to cool for 15~20 seconds before reopening to boil water. The kettle may be stored on the power base when not in use.

**NOTE: Ensure power supply is turned off when kettle is not in use.**

### **Boil-dry protection**

Should you accidentally allow the kettle to operate without water, the boil-dry protection will automatically switch it off. If this should occur, allow the kettle to cool before filling with cold water and re-boiling.

## Care and cleaning

Always disconnect the appliance from the power outlet and leave it to cool down completely before cleaning.

Never immerse the kettle or cord in water, or allow moisture to contact with these parts.

### Removal of mineral deposits

Mineral deposits in tap water may cause the kettle interior to discolor .To remove this build-up, use non-toxic Liquid Descaler.

#### Alternatively:

1. Fill the kettle with 3 cups of white vinegar and the remainder of water and be allowed to stand overnight. **Do not boil.**
2. Empty the solution from the kettle. Any stains remaining inside the spout can be removed by rubbing with a damp cloth, fill the kettle with clean water, bring to boil and then discard the water. Repeat and the kettle will then be ready to use.

### Cleaning external housing

Wipe the external housing with a wild and damp cloth or cleaner.

**CAUTION: Do not use chemical, steel, wooden or abrasive cleaners to clean the outside of the kettle.**

#### Cleaning the filter

Remember to clean the filter with a wild and damp cloth at intervals.

#### Storage

When not in use or storage, the power cord may be wound around the cord storage under the base of kettle.

## Environment friendly disposal



You can help protect the environment!

Please remember to respect the local regulations:

hand in the non-working electrical equipments to an appropriate waste disposal center.

