 





DRY IRON  
MODEL NO.:RM/305

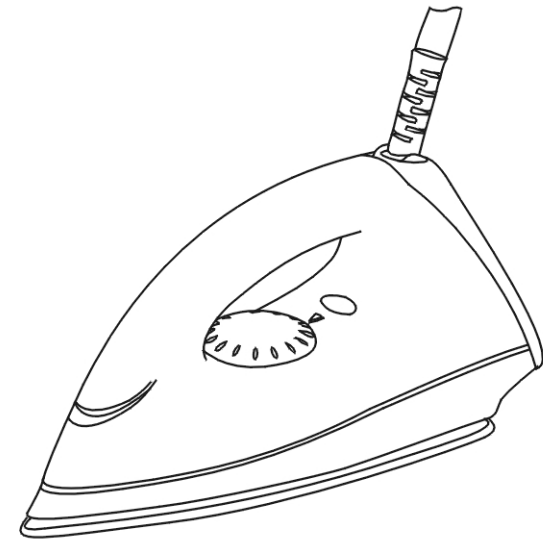

**INSTRUCTION MANUAL**
 
## KNOW YOUR IRON

- A. Soleplate
- B. Temperature control dial
- C. Swivelling cord protector
- D. Supply cord
- E. Supply pilot light

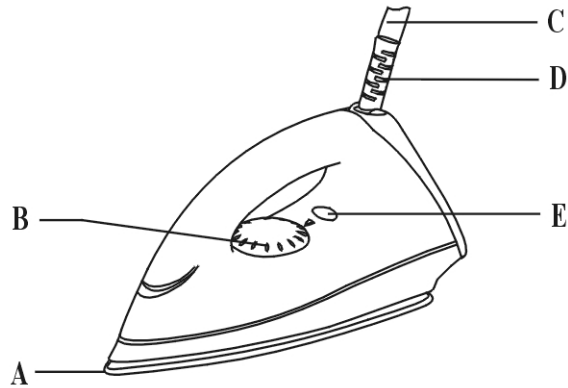

### Important

Please read these instructions for use carefully in conjunction with illustrations before using the appliance.

Never use the appliance if damaged in any way.

Take care the children cannot touch the iron when hot and that they cannot plug the mains cord.

The cord set should not be allowed to touch the soleplate when it is hot

Never immerse the iron in water

Always place the iron with its back on a firm flat surface when interrupting

Ironing and after use. When leaving, even when only for a short while always unplug the iron

Keep the soleplate smooth; avoid hard contact with metal objects.

Some parts of the iron have been slightly greased and as a result the iron might slightly smoke when connected for the first time, After a short while ,however this will cease.

Do not leave the iron unattended while it is connected to the mains supply

If the main cord of this appliances is damaged, it must be replaced by the original type only.

### Ironing temperature

Always check first if a label with ironing instructions is attached to the article to be ironed. (See table.) Follow these ironing instructions in all cases.

If ironing instructions are missing but you know the kind of fabric, then see the table for recommended ironing temperatures.

The table is valid for the fibre materials only.

If some kind of finish has been applied (gloss, wrinkle, relief, etc. ), the textile can best be ironed at a lower temperature.

First sort out the fabrics according to ironing temperature: wool with wool cotton with cotton, etc.

The iron heats up quicker than it cools down. Therefore, start ironing the articles requiring the lowest temperature such as those made of synthetic fibres.

Then progress to the higher temperature. Finish by ironing cotton and linen.


 





If the article is made of a mixture of different fibers, you must always select the lowest ironing temperature of the composition of those fibres. ( E. g. an articles consisting of “60% polyester and 40% cotton” should be ironed at the temperature indicated for polyester..)

If you do not know what kinds of fabric(s) the article has made of, find a spot which will be invisible when wearing or using the article to try out the ironing temperature.(Always start at a low temperature and increase to one which gives the requires results)

Velet and other textures which rapidly acquire spots should be ironed in one direction only (with the nap) applying only light pressure.

Always keep the iron moving.

Iron the reverse side if synthetic materials and silk to prevent shining spots. To prevent staining do not use the spray on silk or other delicate fabrics

 Table		
Label with ironing Instructions	Kind of textile	Temperature dial
		
	Synthetic e.g. acetate, acrylic, viscose, polyamide, polyester. silk	MIN   · 
	Wool	··   · 
	Cotton Linen	···   MAX
	Please note: This article cannot be ironed!	

### Setting temperature

At the appropriate ironing temperature indicate in the ironing instructions or in the fabric table by means of the temperature dial (fig 1 )

Insert the main plug into the wall socket. The pilot light will now come on(fig 2 )

When the pilot light has gone out and has come on again you can start ironing(fig 3 )

The pilot light will come on from time to time during ironing. This has no effect on the ironing, so simply continue.

If you set the temperature control to a lower setting after ironing at a high temperature, do not recommence iron before the pilot light comes on again.

### Ironing tips

Iron with a straight back.. Adjust the height of the ironing board so that the handle of the iron is on the same level as your elbow.

Pressing onto the iron is not necessary provided that the temperature has been set correctly. ironing is most effective if the laundry is slightly damp.

### When finished ironing

-Place the iron its rear side. (fig 4 )

-Set the temperature dial to position "MIN"(fag 5 )

-Remove the mains plug from the wall socket.(fig 6 )

-Let the iron cool down for at least 30 minutes.

-You can wind up the main cord(fig 7 ) and then fix the cord clip.(fig 8)

 
 
 
 
 
 
 
 
-Store the iron standing on its rear side to prevent damage soleplate (fi g 4 )

### Cleaning

-Before cleaning remove the mains plug from the wall socket, let the iron to cool down sufficiently.

-The appliance can be cleaned with a damp cloth.

5 )

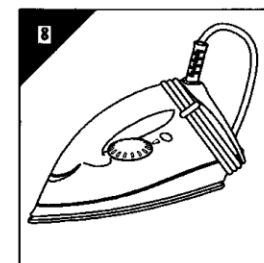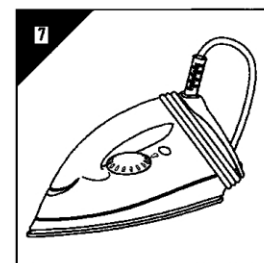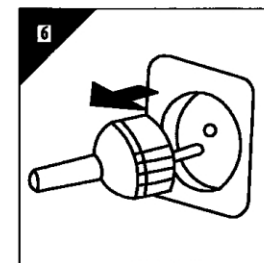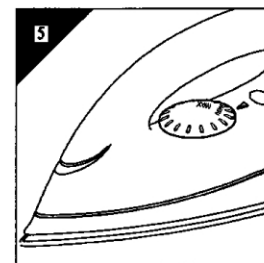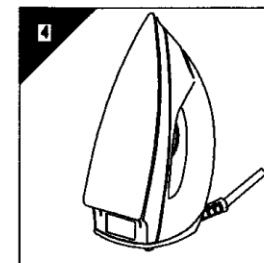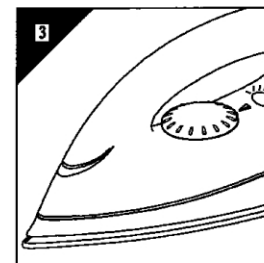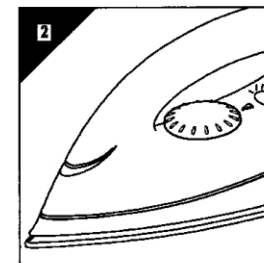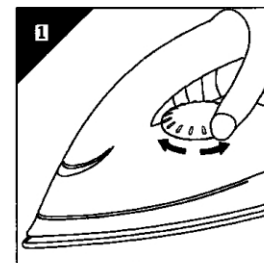

### Attention:

When the plug connecting with the power socket, the user is not allowed to leave  
When the power cord is damaged, contact your dealers or an authorized service center for repair