

135.00 mm



STEAM IRON
MODEL NO. RM096



INSTRUCTION MANUAL

IMPORTANT SAFETY INSTRUCTIONS


When using your Ramtons, heat safety precautions should always be followed, including the following:
READ ALL INSTRUCTIONS BEFORE USING
1. Use this iron only on its intended use.
2. To prevent against a risk of electric shock, do not immerse the base in water or other liquids.
3. The iron should always be removed to "OFF" mode. Never touch cord or disconnected from socket, instead, plug power cord and pull it down.
4. Do not allow cord to touch hot surfaces. Let iron cool completely before putting away. Long cord should be stored away from steam.
5. Always disconnect iron from electrical outlet when filling with water or emptying and when not in use.
6. Do not operate iron with a damaged cord or if the iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the iron tube if it is equipped with automatic shut-off mechanism and repair. However, reasonably use care avoid electric shock when the iron is used.
7. Close supervision is necessary for any appliance being used by or near children. Do not leave iron unattended while connected to an electrical outlet.
8. Children may enter the steam tank quickly when it is hot. Do not touch the steam tank. Please use the steam tank cap when not in use.
9. If the multifunction indicator goes on, the fabric is not opening properly. Disconnect from the power supply and use the fabric as recommended by qualified service personnel.

Correct Disposal of this product
This marking indicates that this product should not be disposed with other household wastes throughout the EU. In general, please take to the recycler or to a household waste recycling centre. To ensure your waste disposal, please see the labels and collection systems or contact the retailer where the product was purchased. They can advise you on the correct disposal method.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given specific instructions concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The iron must not be left unattended while it is connected to the supply mains.
- The plug must be removed from the socket outlet before the water reservoir is filled with water.
- The iron must be used and stored on a stable surface.
- When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
- The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given appropriate or instructive monitoring and supervision by a fully trained and authorized person.
- Children shall not play with the appliance. Cleaning and use maintenance shall not be made by children without supervision.
- Keep the iron and its cord out of reach of children less than 3 years of age when it is not plugged in or when it is cooling down.

SPECIAL INSTRUCTIONS
1. To avoid electric shock, do not operate on the high voltage appliance on the same circuit.
2. If a combination of an electrically inoperative, a 10 ampere cord should be used. Care should be taken to ensure any voltage. Care should be taken to ensure the cord is not damaged by pulling or tripping over.
SAVE THESE INSTRUCTIONS
More specifically:
DO NOT touch the appliance or unplug the power cord from the appliance without supervision.
NEVER immerse the iron, cable or plug in any liquid.
DO NOT leave the iron unattended while it is connected to the electrical network.
DO NOT leave the appliance unattended plugged in. Disconnect the plug from the mains when the appliance is not being used.
NEVER touch the appliance with wet or damp hands.
DO NOT use the power cord or the appliance to pull the plug out of the outlet.
DO NOT leave the appliance plugged in to the socket (iron, iron, etc.).
DO NOT leave the iron without supervision when it is connected to the power supply.
DO NOT allow children to play with the iron when it is plugged into the socket.
PLEASE NOTE:
Do not use electrical devices, heated substances or deodorants. Failure to comply with the above mentioned regulations leads to the loss of guarantee.

DESCRIPTION OF DEVICE
A. Spray nozzle
B. Fibre door
C. Steam knob
D. Steam button
E. Multifunction button
F. Light cover
G. Body
H. Control knob
I. Single cord
J. Water tank
K. Steam tank
L. Steam cap
M. Soleplate

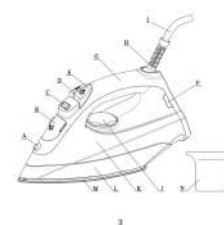

- Leave the iron to cool down completely.
- Roll up the power cord with the socket (Fig. 1).
- Always pull the iron away in a vertical position.
ADVICE FOR GOOD IRONING
We recommend using the lowest temperature with fabrics that have natural finishes (silk, wool, etc.).
If the fabric is mixed (e.g. 40% cotton, 60% polyester), use the thermostat in the temperature of the fabric requiring the lowest temperature.
If you don't know the composition of the fabric, determine the suitable temperature by testing on a hidden corner of the garment. Start with a low temperature and increase it gradually until it reaches the ideal temperature.
Never use steam with traces of perspiration or other marks on the heat of the plate. Use the steam on the fabric, making them more visible.
The iron is more effective if you set a dry iron at a moderate temperature. Once the iron is hot, the risk of burning is reduced.
To avoid marking with marks or pollution garments, they are ironed inside out. To avoid marking with marks, they are ironed inside out (following the fibre) inside an ironing board on the iron.
The heating the working machine is heated, the iron parts come out cooled. This also happens when the iron is not completely dry.
Major fabrics are easier to iron if they are not completely dry.
For example, silk should be ironed damp.
PLEASE NOTE!
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a suitably qualified person in order to avoid a hazard.

REY IRONING
To iron without steam, follow the instructions in section "Steam control", turning the steam selector (C) to position "dry".
Steam function
Hold the steam knob (C) to the steam button (D) directly after a steam spray or quickly after a regulated spray (Fig. 1).
Warning! Do not allow children, or unattended monitoring of the fabric, to play with the spray function (D), or pulling the cord (C) between the iron and the fabric. To avoid burning, do not use the spray cord or another fabric.
SELF-CLEANING
The self-cleaning feature cleans inside the plate, removing impurities. We recommend using it every 10-15 days. Operation:
- If the indicator light is illuminated, indicate and set the steam selector (C) to the steam position (Fig. 1).
- Set the thermostat knob (H) to the maximum temperature and wait for the light to turn off.
- Set the steam selector (C) to the self-cleaning position. It will automatically purge the spray system (Fig. 1).
- Pull the plug out of the socket and let the iron cool down on the soleplate.
- Set the steam selector (C) to the steam position and set the thermostat knob (H) to the steam position.
- When the indicator light is illuminated, you can clean it with a damp cloth.
HOW TO PUT IT AWAY
- Disconnect the plug of the iron from the socket.
- Store the iron by hanging the iron quickly down and gently shaking it.

ANTI-CALC SYSTEM
A special resin filter inside the water reservoir reduces the water and prevents scale buildup in the plate. The resin filter prevents and does not need replacing.
How to use:
Use tap water only. Distilled or demineralized water makes the "Anti-Calc" anti-scale system ineffective by altering its physicochemical characteristics.
Do not use chemical additives, essential substances or deodorants. Failure to comply with the above mentioned regulations leads to the loss of guarantee.
ANTI-DROP SYSTEM
With the anti-drop system, the iron perfectly iron even the most delicate fabrics. Always use low fabric at low temperature. The plate may cool down to the point where no more steam comes out, but other signs of heating mean that the iron is still hot. In these cases, the Anti-Drop system automatically reduces to prevent impurities, so that you can iron the most delicate fabrics without risk of scorching or staining them.
ANTI-DROP (Dry) (RM096)
When using the iron for the first time, you must set a slight amount of water and low steam mode made by the expanding plastic. This is quite normal and it stops after a short time. We also recommend placing the iron over an ordinary cloth before using it for the first time.

PREPARATION
Set the thermostat according to the instructions printed on the garment label, or the ironing, according to the type of fabric.

GARMENT LABEL	FABRIC TYPE	THERMOSTAT REGULATION
---	synthetic	low temperature
---	silk, wool	medium temperature
---	Cotton, linen	high temperature

Fabric not to be ironed

STEAM IRONING
Filling the reservoir
- Check that the plug is disconnected from the socket.
- Move the steam selector (C) to "dry" (Fig. 1).
- Open the lid (B).
- Tilt the iron so that the steam is help the water into the opening without overflowing.
- Slightly pour the water into the reservoir with the fill cap (N) and taking care not to go over the maximum level (150ml) indicated by "MAX" on the reservoir (Fig. 1).
- Close the lid (B).

Selecting the temperature.
- Put the iron in a vertical position.
- Adjust the thermostat knob (H) according to the instructions printed on the garment label (Fig. 2). The plate temperature control light (F) indicates that the iron is heating up. Wait until the plate temperature control light goes off before ironing.
Warning: during ironing, the plate temperature control light (F) comes on at intervals, indicating that the selected temperature is maintained. If you lower the thermostat temperature when ironing at a high temperature, do not use steam and the plate temperature control light comes on again.
Selecting the steam.
The quantity of steam is regulated by the steam selector (C).
- Move the steam selector to a position between minimum and maximum depending on the quantity of steam required and the temperature selected (Fig. 3).
Warning: the iron gives off steam continuously only if you hold the iron down on the ironing board. The maximum steam is produced when the iron is in a vertical position or by moving the steam selector to "dry". As indicated in the thermostat knob (H) and in the control table, you can only use steam at high temperatures. If the selected temperature is too low, water may drip onto the plate.
Selecting the steam and steam when ironing vertically.
Press the steam knob (C) to generate a powerful burst of steam that can penetrate the fabric and smooth the most difficult and tough creases. Wait for a few seconds before pressing again (Fig. 4).
By pressing the steam knob (C) at intervals you can also iron vertically (cotton, long garments, etc.) (Fig. 5).
Warning: Do not use the steam knob (C) only if you are at high temperature. Stop the steam when the plate temperature control light (F) comes on, then start ironing again only after the light has gone off.

1

8

7

4

5

6

195.00 mm