



## PANINI/Grill MODLE NO.RM/307




### INSTRUCTION MANUAL

#### IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following  
**READ ALL INSTRUCTIONS**

Specification: 220V~240V 50/60Hz 900~1080W

- 1 Do not touch hot surfaces; use handles or knobs.
- 2 **WARNING:** This electrical appliance contains a heating function. Surfaces, also different than the functional surfaces, can develop high temperatures. Since temperatures are differently perceived by different persons, this equipment shall be used with **CAUTION**. The equipment shall be touch only at intended handles and gripping surfaces, and use heat protection like gloves or similar. Surfaces other than intended gripping surfaces shall get sufficiently time to the cool down before getting touched.
- 3 The temperature of the accessible surfaces may be very high  when the appliance is operating. Make sure not to touch these hot parts of the appliance.
- 4 To protect against fire, electric shock, and injury to persons, **DO NOT IMMERSER CORD OR PLUG OR THE APPLIANCE** in water or other liquids.
- 5 Close supervision is necessary when any appliance is used by or near children.
- 6 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- 7 Keep the appliance and its cord out of reach of children less than 8 years.
- 8 Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning appliance.
- 9 Do not operate any appliance with a damaged cord or plug, or after the appliance has malfunctioned or has been damaged in any manner. Return the appliance to the nearest Repair centre for examination, repair or adjustment.
- 10 The use of accessory attachments not recommended by manufacturer may result in fire, electrical shock, or risk of injury to persons.
- 11 Do not use outdoors.
- 12 Do not let power cord hang over edge of table or counter, or touch hot surfaces.
- 13 Do not place on or near hot gas or electric burner, or in a heated oven.
- 14 Unplug the unit when finished using.
- 15 Do not use appliance for other than intended use.
- 16 Extreme caution must be exercised when moving an appliance containing hot oil or other hot liquids.
- 17 Do not use appliances for other than intended use.
- 18 **WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, ONLY AUTHORIZED PERSONNEL SHOULD DO REPAIRS.**

#### SAVE THESE INSTRUCTIONS

#### FOR HOUSEHOLD USE ONLY

#### SPECIAL CORD INSTRUCTIONS:

A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord. Longer extension cords are available and may be used if care is exercised in their use.

If a long extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or animals, or tripped over.

#### Special safety notes

The baking surfaces get very hot. Touch the handles only.

Put the unit down onto a heat-resistant surface or mat.

In order to prevent heat from building up, do not put the unit directly underneath a cupboard. Ensure that there is enough space all around.

Beware of steam coming out when you open the baking section.

The bread can burn, so never use the sandwich toaster near or below curtains and other inflammable materials!

A risk of fire and electrical shock exists in all electrical appliances and may cause personal injury or death. Please follow all safety instructions.

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard. Do not immerse the appliance in any liquid.

The temperature of accessible surfaces may be high when the appliance is operating.

Charcoal or similar combustible fuels must not be used with this appliance.

#### Starting-up the unit

##### NON-STICK COATING

Lightly grease the baking surfaces before the unit is used for the first time. Use the appliance for about 10 minutes with the toasting surfaces closed (see "using the unit"). Then wipe it down with a damp cloth. Please do not eat the first pieces of toast you make.

#### Using the unit

1, Put the plug into an earthed 220-240V, 50Hz mains socket. The red LED (POWER) light up.

2, Keep the baking unit closed during the warming-up time.

3, Open the cover and place each toast. Then close the lid gently. Block the handle with the hinge. The green control lamp goes on after a few seconds,

baking is finished

4, Open the lid and remove the slices of toast with a wooden fork or the like.

Do not use pointed or sharp objects to avoid damaging the coating of the baking surfaces.

5, The baking section should always be closed in the intervals between baking.

#### Cleaning & maintenance

Pull out the mains plug and allow the unit to cool down. z Brush away remains of crumbs from the baking surfaces.

Clean the machine only with a slightly damp cloth.

Do not use abrasive detergents.



Correct Disposal of this product

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.