 




STAND BLENDER

INSTRUCTION MANUAL

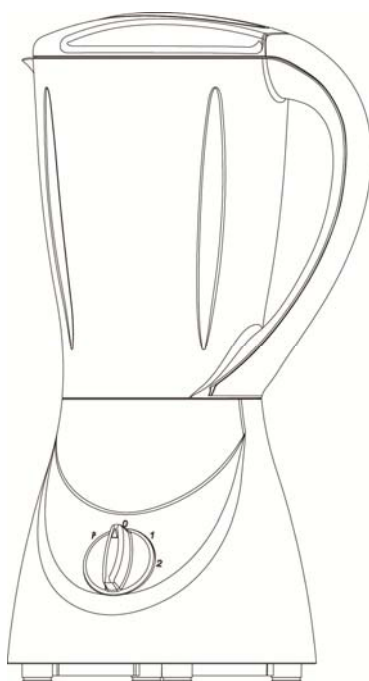

Model: RM/308

Read this booklet thoroughly before using and save it for future reference

IMPORTANT SAFEGUARDS


When using the electrical appliance, the below basic safety precautions should be followed:

1. Read all instructions.
2. Before using check that the voltage power corresponds to the one shown on the appliance nameplate.
3. Do not let cord hang over edge of table or counter.
4. Do not operate any appliance with a damage cord or plug or after the appliance malfunction or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
5. If the supply cord is damaged, it must be replaced by the manufacture or its service agent or a similarly quality person in order to avoid a hazard .
6. Use by children not intended but foreseeable, but only allowed with supervision.
7. Avoid contacting moving parts.
8. Blades are sharp, so handle carefully.
9. The use of attachment, including jar, jar cover, not recommended or sold by manufacture may cause fire, electric shock or injury.
10. The appliance can not be used for blending hard and dry substance, otherwise the blade could be blunted.
11. Switch off the appliance before approaching parts which move in use.
12. Do not immerse the Motor Unit into water or other liquids.
13. Do not use outdoors.
14. Save these instructions
15. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and

understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

HOUSEHOLD USE ONLY

KNOW YOUR BLENDER

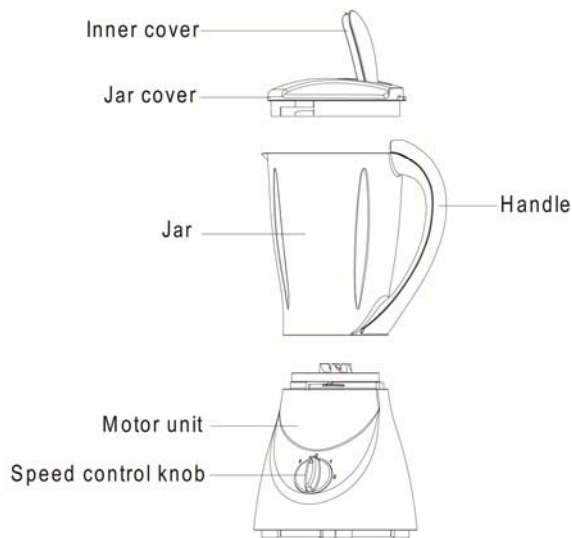

USING THE BLENDER

1. Place the jar on the Motor Unit (see fig.1a), then turn the jar in clockwise until it is locked into place (see Fig. 1b).

Important: for your protection, this unit has a safety device. The unit will not operate unless Jar is properly locked in place.

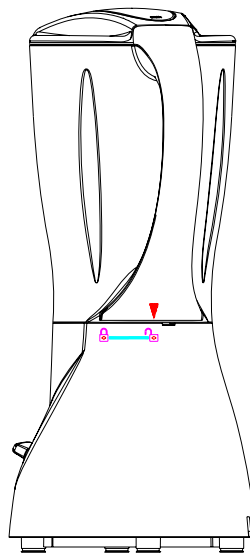


Fig.1a

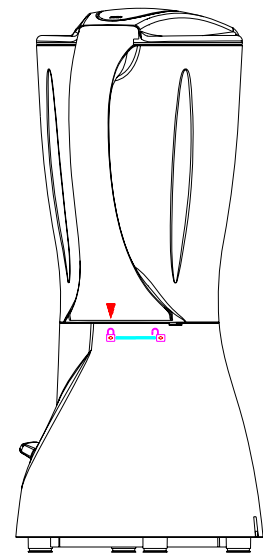


Fig.1b

2. Peel or core the fruits or vegetables and then cut them into small dices, put the food piece into the jar. Usually certain amount of purified water has to be added to facilitate the smooth running, the amount of mixture should not exceed the max level as indicated on the jar.

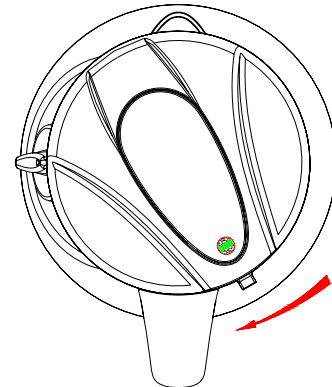



Fig.2

Note: never use boiling liquid or run the appliance empty.

3. Replace the Jar Cover on the jar, then turn the Jar Cover in clockwise until it clicks into place.

Important: for your protection, this unit has a safety device. The unit will not operate unless Jar Cover is properly locked in place. (see Fig. 2).

4. You may add ingredients into the jar by opening inner cover through the center opening of Jar Cover during operation, close the inner cover if necessary.

Note: the inner cover can only be opened by pressing the end with the mark of  , but never attempt to remove it out (see fig.3)

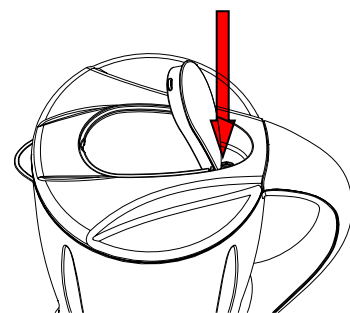


Fig.3

5. Connect the plug to wall outlet and set Speed Control Knob to your desired setting. You can turn the Speed Control Knob to the P position if want to accelerate the blending process. The detailed information of

Speed Control Knob is as follows (figure 4).

Turn the Speed Control knob to the P position to accelerate the process, stop it by turning it to the 0 position.

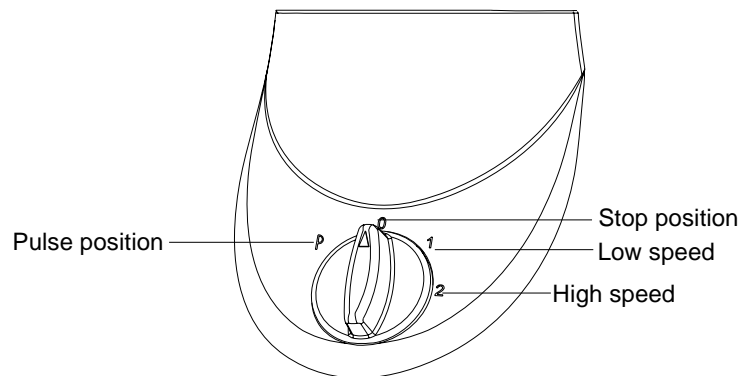


Fig.4

6. Do not run the appliance for more than 3 minutes per time, and only wait until the unit is cooled to room temperature before performing next operation cycles.
7. Turn the Speed Control Knob to 0 Position once the mixture has been blended to your desired consistency.
8. Remove the Jar from the Motor Unit (by turning the jar anti-clockwise), carefully take down the Jar Cover, then pour and serve.

CLEANING AND MAINTENANCE

The Auto Clean feature can clean the blender and blade assembly easily, rapidly in complete safety.

-Pour a little warm soapy water into the jar and turn the Speed Selector to P position for a few seconds. Then turn back to the 0 position.

-Remove the jar and rinse under running water.

-Wiping the outer surface of Motor Unit with a damp cloth, do not use

abrasive cleansers. Never immerse in water for cleaning

-Dry all parts and then replace them

For complete cleaning, you can hold the blade assembly at the bottom of jar carefully, for it is sharp, take it out by turning coupling on the other side clockwise emphatically(see Fig 5), then put Jar Cover, inner cover, Jar, blade assembly into Dishwasher for clean, they are dishwasher safe components, but the temp setting shall not exceed 70°C.

If any problem has been encountered during use never disassemble the Motor Base by yourself, no user serviceable parts inside. Contact only the authorized service facility for examination and repair.

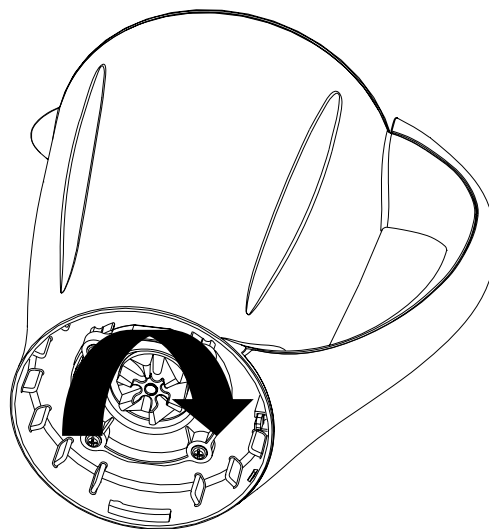 


Fig.5

Environment friendly disposal



You can help protect the environment!
Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center.