


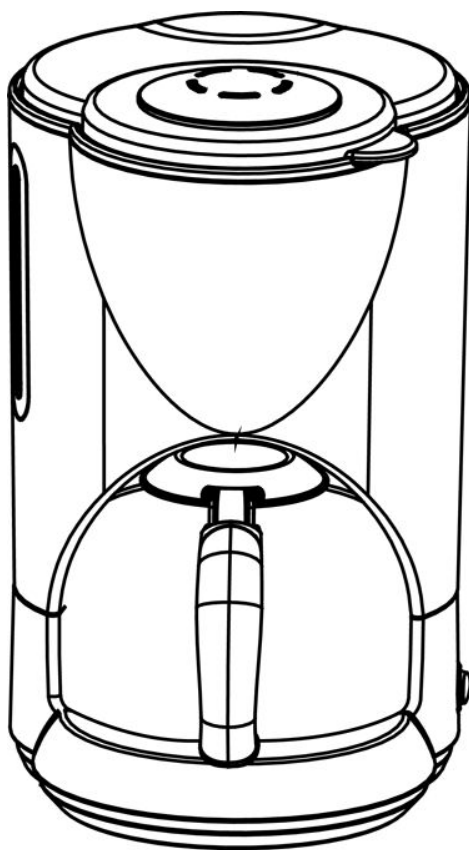

COFFEE MAKER

INSTRUCTION MANUAL



Model: RM/376

Read this booklet thoroughly before using and save it for future reference

IMPORTANT SAFEGUARDS

Before using the electrical appliance, the following basic precautions should always be followed including the following:

1. Read all instructions.
2. Before using check that the voltage of wall outlet corresponds to rated voltage marked on the rating plate.
3. This appliance has been incorporated with a grounded plug. Please ensure the wall outlet in your house is well earthed.
4. Close supervision is necessary when your appliance is being used near children.
5. Do not place the coffee maker on hot surface or beside fire in order to avoid to be damaged.
6. Remove plug from wall outlet before cleaning and when not in use. Allow appliance cool down completely before taking off, attaching components or before cleaning.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
8. To protect against fire, electric shock and injury to persons do not immerse cord, plug, in water or other liquid.
9. Place appliance on flat surface or table, do not hang power cord over the edge of table or counter.
10. Ensure the power cord do not touch hot surface of appliance.
11. Some parts of appliance is hot when operated, so do not touch with hand. Use handles or knobs only.
12. To disconnect, remove plug from wall outlet. Always hold the plug. But never pull the cord.
13. Do not let the coffee maker operate without water.
14. Scalding may occur if the lid is removed during the brewing cycles.
15. Never use the appliance if the carafe shows any signs of cracks or carafe having a loose or weakened handle. Only use the carafe with this appliance. Use carefully as the carafe is very fragile.
16. Never leave the empty carafe on the keeping warm plate otherwise the carafe is liable to crack.
17. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons
18. Do not use outdoors.
19. Do not use appliance for other than intended use.
20. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a

safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

21. Save these instructions.

BEFORE FIRST USE

Check that all accessories are complete and the unit is not damaged. Add water into water tank to the MAX level and brew water for several times without coffee powder, then discard the water. Clean all detachable parts thoroughly with warm water.

USING YOUR COFFEE MAKER

1) Open the top cover and fill fresh water with the carafe. The water level should according to the indication on the water gauge.

2) Place the filter in the funnel, and make sure it is assembled correctly.

3) Add coffee powder into filter. Usually a cup of coffee need a level spoon of coffee powder, but you may adjust according to personal taste.

4) Then assemble the funnel ass'y into place. Put the tank cover in place.

5) Insert the carafe on keeping warm plate horizontally.

6) Plug the power cord into the outlet.

7) Turning on the switch, the indicator will be illuminated. The appliance will begin working. The brewing process can be interrupted by shutting off the switch at any time. The appliance will continue brewing once the switch is turned on again.

Caution: to reduce the risk of steam scalding, be careful when opening the top cover during brewing.

Note: you can take out carafe, pour and serve at any time. The appliance will stop dripping automatically. But the time cannot exceed 30 seconds.

8) Remove out carafe to serve when finish brewing (about one minute later after the coffee stops dripping out.)

Note: the coffee you get will less than the water you have added, as some water is absorbed by coffee powder.

9) When the process is finished, if you do not want to serve immediately, keep the switch on, the coffee can be kept warm in the keeping warm plate until the power is cut off manually. For an optimum coffee taste, serve it just after brewing.

10) Always turn the coffee maker off and disconnect the power supply when not use.

Note: Pay attention to pour the coffee out, otherwise you may be hurt as the temperature of coffee just finished is high.

CLEANING AND MAINTENANCE

CAUTION: Be sure to unplug this appliance before cleaning. To protect against electrical shock, do not immerse cord, plug or unit in water or liquid. After each use, always make sure plug is first removed from wall outlet.

- 1) Clean all detachable parts after each use in hot, sudsy water.
- 2) Wipe the product's exterior surface with a soft, damp cloth to remove stains.
- 3) Water droplets may buildup in the area above the funnel and drip onto the product base during brewing. To control the dripping, wipe off the area with a clean, dry cloth after each use of the product.
- 4) Use a damp cloth to gently wipe the keeping warm plate. Never use abrasive cleaner to clean it.
- 5) Replace all parts and keep for next use.

REMOVING MINERAL DEPOSITS


1. Fill the tank with water and descaler to the MAX level (the scale of water and descaler is 4:1, the detail refers to the instruction of descaler. Please use "household descaler", you can use the citric acid instead of the descaler (the one hundred parts of water and three parts of citric acid)).
2. Push drip carafe on keeping warm plate, pay attention to let center line of carafe aligns with that of brew basket.
3. Turning on the switch, the indicator will be illuminated. After a while, water will drop out automatically.
4. After percolate the equivalent of one cup and then shut off the switch to stop the appliance.
5. Leave the solution work for 15 minutes, repeat the steps of 3-5 again.
6. Turn the appliance on and run off the water until the water tank is completely empty.
7. Rinse by operating the appliance with water at least 3 times.

HINTS FOR GREAT-TASTING COFFEE

1. A clean coffee maker is essential for making great-tasting coffee. Regularly clean the coffee maker as specified in the "CLEANING AND MAINTENANCE" section. Always use fresh, cold water in the coffee maker.

2. Store unused coffee powder in a cool, dry place. After opening a package of coffee powder, reseal it tightly and store it in a refrigerator to maintain its freshness.
3. For an optimum coffee taste, buy whole coffee beans and finely grind them just before brewing.
4. Do not reuse coffee powder since this will greatly reduce the coffee' flavor. Reheating coffee is not recommended as coffee is at its peak flavor immediately after brewing.
5. Clean the coffee maker when over-extraction causes oiliness. Small oil droplets on the surface of brewed, black coffee are due to the extraction of oil from the coffee powder.
6. Oiliness may occur more frequently if heavily roasted coffees are used.

ENVIRONMENT FRIENDLY DISPOSAL

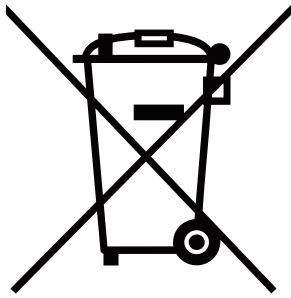

You can help protect the environment!
Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center.