

Malfunction	Disposal
Without pot	The screen is not displayed, the buzzer start to warning. The machine will be off after this state last one minute.
“E1”	The voltage is too high, the screen will show “E1”,the buzzer start to warning. The machine will be off after this state last one minute.
“E2”	The voltage is too low, the screen will show “E2”, the buzzer start to warning. The machine will be off automatically after this state last one minute.
“E3”	The IGBT Sensor is not working, the screen will show “E3”,the buzzer start to warning, this machine will be off automatically after this state last one minute.
“E5”	When in the state of “Hot pot”, the temperature is over, the screen will show “E5”,the buzzer start to warning, this machine will be off automatically after this state last one minute.
“E6”	The sensor of pot bottom is not working, the screen will show “E6”, the buzzer start to warning, this machine will be off automatically after this mode last one minute.
“E7”	The temperature of pot bottom is over, the screen will show “E7”,the, the buzzer start to warning, this machine will be off automatically after this state last one minute.
“E8”	The sensor of pot bottom is broken.



INDUCTION COOKER



Model No.RM/381


Thank you for purchasing our induction cooker please read this instruction manual carefully before using and keep it cautiously for your future reference.

PRODUCT INTRODUCTION

Induction cooker is one of the new environment-friendly kitchenware, developed by our company upon Europe, American and Japanese advanced technology. The main parts such as IGBT power tube, CPU and IC etc are imported from SIEMENS, TOSHIBA, MOTOROLA, KOREAN, which are advanced in craft and function. Our induction cookers are of national standard, suitable for all kinds of cooking. In short time, heating efficiency can get up to 94.36% from startup to boil, with peculiar micro-computerized safety-inspection system; it is super safe and reliable. By the characteristic of cooking with no fire, no smoke and no exhaust, it avoid traditional cooking safety problem, therefore is liked by many consumers.

Our induction cooker will bring you safer and health to your family, more cleanness to your kitchen.

INDUCTION COOKER WORKING PRINCIPLE

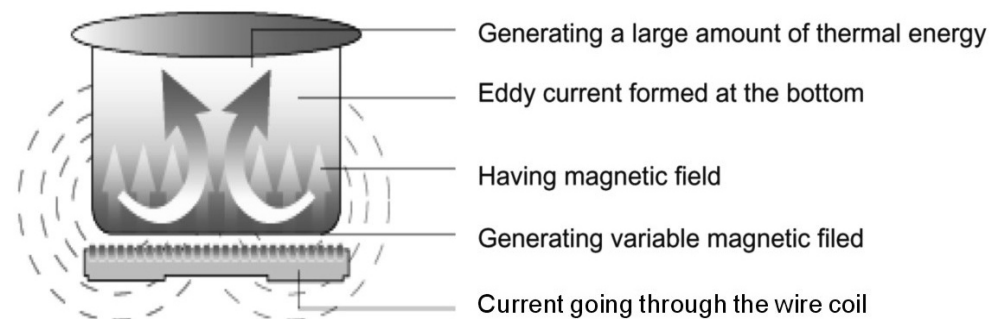

The induction cooker is mainly based on the principle of electromagnetic induction technology. Current generates variable magnetic field after running through the wire coil. Eddy current is generated at the bottom when the magnetic field induces the cooker plate. A large amount of thermal energy produced can heat the bottom quickly, thus heating up

5. Do not clean by water directly, water gets inside may cause product damage.
6. Make the induction glass plate and pan clean before cook, otherwise, dirt after charring is very difficult to clean and the plate may get discoloration.
7. You may clean air vent/air entry's dirt by vacuum cleaner to suck up or by cotton, if there is dirt with oil, add a little detergent with toothbrush to clean surface. Never clear inside with water or any liquid.
8. Don't uses caustic impregnates to clean. It may damage the cooker by chemical reaction..
9. Do not use benzene, thinner, scrubbing brush or polishing powder to clean the induction cooker.


USABLE AND NON-USABLE COOKING UTENSILS

with diameter from 12 to 26cm.



Non-usable Pans

Heat-resistant glass, ceramic container, copper, aluminum pans/pots
Rounded-bottom pans/pots with bottom measuring less than 12cm.

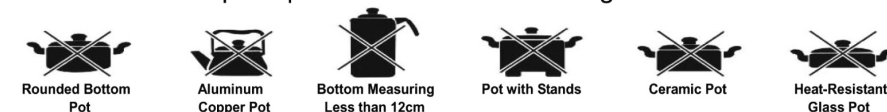

TROUBLE SHOOTING

If there is something wrong with the induction cooker, please check it as following before sending to repair.

6. Do not modify the parts, or repair the by yourself.
7. Do not use the unit near flame or wet places.
8. Do not use where children can easily touch the unit, do not allow children to use the unit by themselves.
9. Do not place the unit on unstable surfaces.
10. Do not move the unit when the pot or the pan is on it.
11. Do not hear the pot empty or overheat the pot.
12. Do not place metallic objects such as knives, forks, spoons, lids, cans, and aluminum foils on the top plate.
13. Use the unit with sufficient space around it, When unit working, it must be placed at least 10cm from the wall. Keep the front side and either right or left side of the unit clear.
14. Do not use the unit on carpet or tablecloth (vinyl) or any other low-heat-resistant article.
15. Do not place a sheet of paper/silver paper between the pot/pan and the unit. The paper may get burnt.
16. Do not break the surface, if the surface is cracked, switch off immediately and take it to the qualified service center.
17. Do not block air intake or exhaust vent.
18. Do not touch the top plate right after removing the pot or the pan, as the top plate will still be very hot.
19. Do not place the unit near to the objects which are affected by magnet, such as: watches, radios, televisions automatic-backing cards and cassette tapes.
20. Qualified technicians must replace the power cord.

CLEANNES & MAINTENANCE


1. Please shut off the power and pull out the plug before your cleaning.
2. Clean the unit until it cools down completely.
3. To remove dirt, please select litmus less detergent.
4. After remove dirt, please use neat wet cloth to clean the unit.

the food very fast, with thermal efficiency up to 94.36%.


SPECIFICATION

Model No.	FYM20-38B
Power Supply	AC 220V~50HZ
Power Range	200W~2000W
Temperature Adjustment	60℃~240℃
Timer/Preset timer	0/ 23 hours 59minutes

PARTS NAME

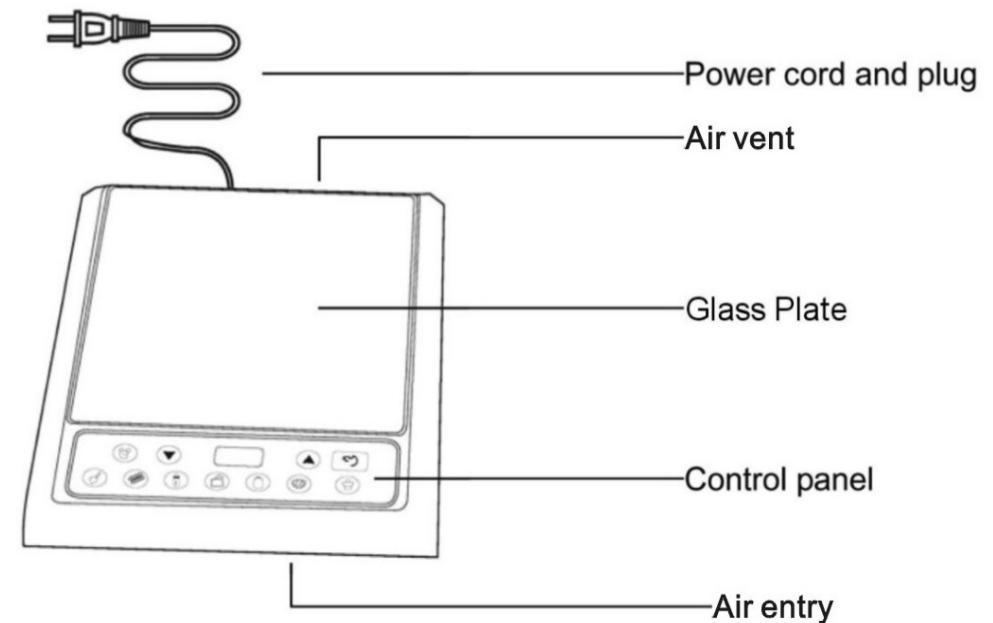

OPERATION AND UASGE

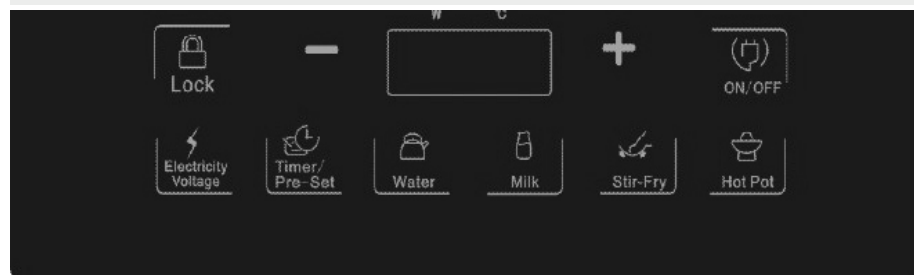 

1. After plugging and switch-on power, the indicator of “on/off” will light, after several seconds with the sound. It will show that the induction cooker have connected with the electrical source and ready to work.
2. Put the suitable cooking utensils (with food) in the center of panel, chose any of function according to cooking as needful:

2.1 Hot pot: Touch the key of “On/off”, and touch the key of “Hot pot”, the indicator light of “Hot pot” will light. Which means the function of cook will unseal, it display with 2000W. During use this function, according to requirement, there are 8 levels for your adjust of firepower by touch the key of “+” or “-”. With the cooking function requirement, you also can timer by touch the key of “+” or “-”.

2.2 Stir-fry: Touch the key of “Stir-fry”, the indicator light of “Stir-fry” will light. Which means the function of “Stir-fry” will unseal, it display with 240 °C. During use this function, according to requirement, there are 8 levels for your adjust of temperature by touch the key of “+” or “-”. With the cooking function requirement, you also can timer by touch the key of “+” or “-”.

2.3 Water: Touch the key of “Water”, the indicator light of “Water” will light, Which means the function of “ Water” will unseal, it display “A1” and the temperature indicating lighter will be on, then the induction cooker in aptitude mode. The water boiled after the buzzers make several sounds “Di” and turns off automatically.

2.4 Milk: Touch the key of “Milk”, the indicator light of “Milk” will light, Which means the function of “Milk” will unseal, it display “60”, then the induction cooker in aptitude mode. The water boiled after the buzzers make several sounds “Di” and turns off automatically.

2.5 Electricity / Voltage: Once we select “Electricity / Voltage” option, you can see power consumption with first touch and Line voltage with pressing. After 5 seconds, it will automatically back to basic function.

2.6 Timer / Pre set: Before using the induction cooker, touch the key of “Timer / Pre set”, two side of the color screen blink display hour “00” (show 00). Press “+” or “-” to adjust the time (0-23hours); press “Timer / Pre set” function or after 5 seconds will enter to setting minute, two side of the color screen blink display minute “00”(show 00:00).Press “+” or “-” to adjust the time (0-59 minutes).Press “Timer/Pre-set” function or after 5 seconds will finish the timer set. After finishing cooking, please turn off the power source then pull out of socket.

2.7 Lock: During the working station, touch the key of “Lock” with several seconds, the indicator light of “Lock” will lighting. Expect the “Lock” and “ON/OFF” key, any key do not working. Touch the key of “Lock” again, the lock mode is cancel.

Notice

1. You cannot set timing off and cannot adjust power & temperature for automatic cooking function.
2. For manual cooking function power or temperature adjustment and timing off setting are available.
3. **Overheat Protection:** The unit is equipped with overhear protection.
If the pot or pan gets too hot, the unit will switch off automatically, the buzzer can give out an alarm. Should this happen, wait for some minutes and cool it down. After that, the unit will work without problem.
4. This appliance is liable to get hot during use.

CAUTIONS

1. Do not plug with wet hands.
2. Do not plug into a socket where several other appliances are plugged in.
3. Do not plug into a socket which Ampere load is less than 10A.
4. Do not use if the plug cord is damaged or power plug does not fit the socket safely.
5. Please peel off the cover of moth ball partially, Also please keep this out of reach chirdren.