


### HOW TO CLEAN AND SANITIZE YOUR WATER DISPENSER

1. Unplug the water dispenser from the electrical outlet.
2. Shut off the water supply and remove the water guard.
3. Drain off any water left in the reservoir and tanks through the faucets and drain plugs.
4. Fill reservoir 3/4 full of fresh clean water and add 1/2 tablespoon of liquid bleach to water. Do not use a stronger sanitizing solution!
5. Allow water to stand for 5 to 7 minutes.
6. Drain sanitizing solution out of the reservoir through the faucets and drain plugs.
7. Flush thoroughly with clean water.
8. If a taste problem develops, place 1 tablespoon of baking soda into tank and add fresh water. Allow this solution to stand for 5 minutes, then drain.



### **INSTRUCTION & MAINTENANCE MANUAL HOT & NORMAL WATER DISPENSER**

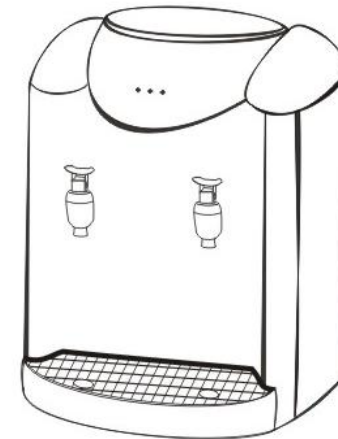

Model: RM-443

**VERY IMPORTANT! YOU MUST READ BEFORE USE.**

Please check the water dispenser and carton for evidence of rough handling and concealed damage. File damage claims with the carrier or return the water dispenser to the place of purchase. If the water dispenser was placed on its side during transport, be sure to allow the unit to stand upright for at least four (4) hours before plugging it in. Failure to observe this procedure could cause the unit to fail or produce excessive noise, and may void your warranty,

**NOTES**

- 1) If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- 2) Do not clean the dispenser by water, which will cause electric shock. Please clean it by wiping with soft fabric.
- 3) As to mineral water, you must clean it with every 2 months.
- 4) Use an earthed wall socket; the cord and plug must be dry.
- 5) Do not make modification to the power supply plug or lengthen the power supply wire which will both cause overheating or fire.
- 6) Do not stop the machine by inserting or pulling the power supply while the machine is working for it is very dangerous.
- 7) The appliance must be positioned so that the plug is accessible.
- 8) Do not place the machine in the rain or in a stream-full room.
- 9) Do not put the machine beside stove, boiler or the place where sunshine can directly irradiate.
- 10) When moving this machine, please do not place it in reverse or excessively declining to avoid knocking or impacting.
- 11) Please do not disassemble and repair it by yourself. If any failure occurs, please contact with your dealer.
- 12) While the water dispenser is working, do not let children play with the machine to avoid sudden scald.
- 13) This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 14) Children should be supervised to ensure that they do not play with the appliance.
- 15) **WARNING** Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- 16) **WARNING** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- 17) **WARNING** to avoid a hazard due to instability of the appliance, it must be fixed a bracket according to the instructions, please refer to “INSTALLING INSTRUCTION FOR BRACKET” as blow.

- 18) **WARNING** Do not use electrical appliances inside the food storage cabinet of the appliance if the unit with the cabinet, unless they are of the type recommended by the manufacturer.
- 19) Please according to local regulations regarding disposal of the appliance for its flammable blowing gas. Before you scrap the appliance, please take off the doors to prevent children trapped.

**UNIT WITH HOT TANK**

Note: On hot and normal unit, the hot tank must be filled with water before connecting water dispenser to the electrical source. Air must be bled out of the hot tank by depressing the hot side (red) faucet to fill the hot tank with water before energizing the unit.(The tank is full when water is free of air bubbles and flows from the hot faucet).Some Hot and normal units are equipped with an On/Off switch, which controls the hot tank. These units are shipped with the hot tank control in the off position. The On/off switch is located on the rear of the water dispenser.

**BASIC OPERATIONAL GUIDELINES**

Always unplug the water dispenser from the wall outlet when out of water. If the power is disconnected for any reason, wait five minutes before reconnecting. The noise level of the machine is below 70dB. Locate water dispenser within reach of a suitable grounded electrical outlet. To help prevent algae growth, do not place water dispenser in direct sunlight or in front of heating vents. Choose a location where floor is level. If water dispenser does not set level to the floor use a shim under one of the feet at the base of it. The water dispenser is pre-cleaned at the factory. However, the stainless steel reservoir and water lines must be sanitized and flushed with fresh water before use. Regular cleaning and sanitizing is advised to ensure continued quality of water consumed. Before plugging in, check the power label on the rear of the unit to ensure the power supply is correct. Serious damage could result if the incorrect supply is used. Never rest cigarettes on water dispenser top. Do not use it as a shelf for plants or storage of other objects. Keep area around water dispenser free of dust and dirt. If water accidentally splashes inside the water dispenser, unplug the unit, remove excess water and dry out before putting back into service. Never place the water dispenser out of doors, it is not suitable. Please do not use it in water-spraying condition; the water dispenser also can not be sanitized by way of water-spraying.