 




OWNER'S MANUAL

16" Orbit Fan

MODEL: RM/461

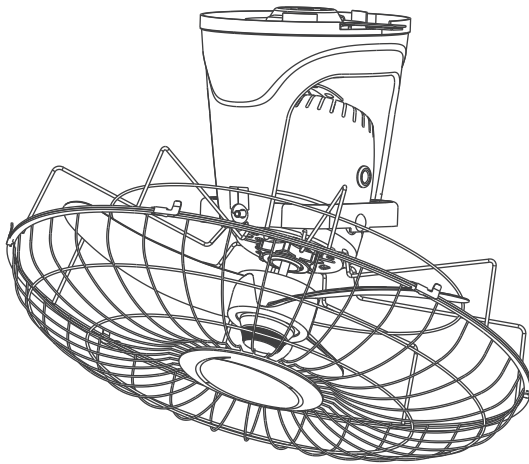

Version 1.0 2015

READ AND SAVE THESE INSTRUCTIONS

Attention: Pictures in the IM are for reference only.

CAUTION

Read Rules for Safe Operation and Instructions Carefully.

 
WARNING

1. If the supply cord is damaged, it must be replaced by manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
2. To protect against the risk of electrical shock, do not immerse the unit, cord or plug in water or other liquid.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Young children should be supervised to ensure that they do not play with the appliance.
4. When the appliance is not in use and before cleaning, unplug the appliance from the outlet.
5. Keep electrical appliances out of reach from Children or infirm persons. Do not let them use the appliances without supervision.
6. When the fan was assembled, the rotor blade guard shall not be taken off anymore
 - Prior cleaning unplug the fan.
 - The rotor guard shall not be disassembled/opened to clean the rotor blades.
 - Wipe the fan enclosure and rotor blade guard with a slightly damp cloth.

RULES FOR SAFE OPERATION

1. Never insert fingers, pencils, or any other object through the grille when fan is running.
2. Disconnect fan when moving from one location to another.
3. Be sure fan is on a stable surface when operating to avoid overturning.
4. DO NOT use fan in window, rain may create electrical hazard.
5. Household use only.

PART FIGURE

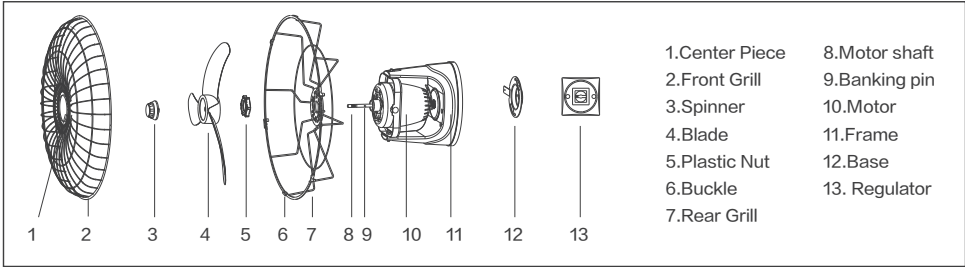

Note: All the pictures in this manual are for explanation purpose only. Any discrepancy between the real object and the illustration in the drawing shall be subject to the real subject.

ASSEMBLY OF FAN

1. MOUNTING BASE DECORATIVE COVER

Unscrew the blade fixing nut and net cover fixing nut from the front end of the motor.

2. MOUNTING REAR NET COVER

Mount the rear net cover. Then put net fixing nuts back and tighten them.

3. MOUNTING BLADES

In mounting fan blade, make the flute at the back of blade wedged onto the banking pin.

Then tighten counter clockwise blade fixing nuts.

 
 
 
 
Note: Do not over tighten the blade fixing nuts.

Otherwise, the nuts may be damaged.

4. MOUNTING FRONT NET COVER

Put the trademark pattern straightly in the center of the front net cover to let it aligned with the screw hole.


Then put the front and rear net covers together. Fasten the movable clips on the covers separately to tighten them together. Finally tighten nuts.

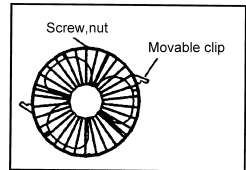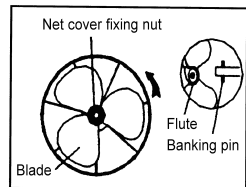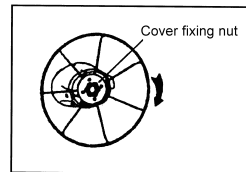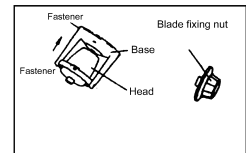

INSTALLATION INSTRUCTION

Install the ceiling fan at least 2.3m above the ground for safety.

 In mounting, fix the base plate at the predetermined place with screws. Hang the fan onto the base plate. Then tighten the board and the base plate with screws. Finally push base decorative cover upward to make its fastener and the fastener of the base buckled together.

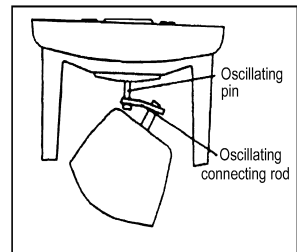

OPERATION INSTRUCTIONS

1. AIR SPEED ADJUSTMENT

The fan has three speed adjustment levels. Please connect them according to the wiring diagram and choose the correspondent speed level as required.

0---Off 1---Low 2---Medium 3---High

2. OSCILLATING AIR BLOW

360 degree air blow is responsible for the fan with adjustable air blow range. Just lightly press the oscillating connecting rod upward and push it to the desired point then press it down to grip the oscillating pin (2 levels available).

MAINTENANCE INSTRUCTION

The fan requires little maintenance. Do not try to fix it by yourself. Refer it to qualified service personnel if service is needed.

1. Before cleaning and assembling, fan must be unplugged.
2. To ensure adequate air circulation to the motor, keep vents at the rear of the motor free of dust. Do not disassemble the fan to remove dust.
3. Please wipe the exterior parts with a soft cloth soaking a mild detergent.
4. Do not use any abrasive detergent or solvents to avoid scratching the surface.
Do not use any of the following as a cleaner: gasoline, thinner.
5. Do not allow water or any other liquid into the motor housing or interior parts.

CLEANING

1. Be sure to unplug from the electrical supply source before cleaning.
2. Plastic parts should be cleaned with a soft cloth moisten with mild soap.
Thoroughly remove soap film with dry cloth.