



Professional Hair Dryer Instructions



220-240V~ 50Hz

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING.

KEEP AWAY FROM WATER.DANGER:

As with most electrical appliances, electrical parts are electrically live even when the switch is off.

To reduce the risk of death by electric shock:

1. Always "unplug it" immediately after using.
2. **DO NOT** use while bathing.
3. **DO NOT** place or store this appliance where it can fall or be pulled into a tub or sink.
4. **DO NOT** place in or drop into water or other liquid.
5. If an appliance falls into water, "unplug it" immediately. **DO NOT** reach into the water.

WARNING: To reduce the risk of burns, electrocution, fire or injury to persons:

1. An appliance should never be left unattended when plugged in.
2. Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use as described in this manual. **DO NOT** use attachments not recommended by the manufacturer.
4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped into water.
5. Keep the cord away from heated surfaces.
DO NOT wrap the cord around the appliance.
6. Never use while sleeping.
7. Never drop or insert any object into any opening.
8. **DO NOT** use outdoors or operate where aerosol(spray) products are being used or where oxygen is being administered.
9. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.

10. **DO NOT** direct hot air toward eyes or other heat sensitive areas.
11. Attachments (when furnished) may be hot during use. Allow them to cool before handling.
12. **DO NOT** place appliance on any surface while it is operating.
13. While using the appliance, keep your hair away from the air inlets.
14. **DO NOT** operate with a voltage converter.
15. **DO NOT** use an extension cord with this appliance.

SAVE THESE INSTRUCTIONS USER MAINTENANCE INSTRUCTIONS

This appliance is equipped with a thermostat that may cycle OFF if the temperature exceeds comfort level due to partially blocked air inlet or air outlet openings. In the event that the appliance stops during use, turn off the switches and allow the appliance to cool down, at which time the thermostat will automatically reset. During use, **DO NOT** block the air openings. When using this appliance near water (e.g., bathrooms), the use of an Electrical outlet protected by a Ground Fault Circuit Interrupter is recommended.

MAINTENANCE

Your appliance is virtually maintenance free. No lubrication is needed. Keep heated surfaces clean and free of dust, dirt, and hair spray. If cleaning becomes necessary, disconnect the appliance from the power source and wipe the exterior with a damp cloth. If the cord becomes twisted, untwist prior to use. WARNING: If any malfunction occurs, do not attempt to repair it yourself. This appliance has no user-serviceable parts.

STORAGE When not in use, "unplug it."

Allow the appliance to cool and store out of reach of children in a safe, dry location. Never wrap the cord around the appliance since this will cause the cord to wear prematurely and break. Handle cord carefully for longer life and avoid jerking, bending sharply, twisting or straining cord, especially at plug connections.