


INSTRUCTION MANUAL

FOR
ELECTRIC HEATER

Model RM/469

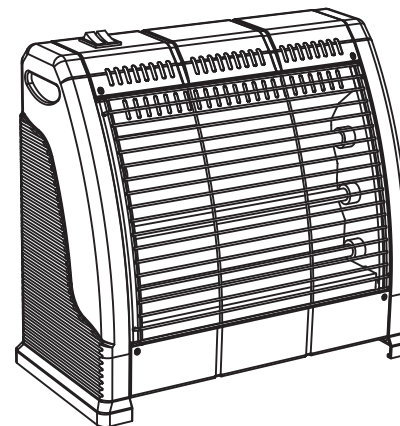

(Please read it carefully before use and save these important instructions)

IMPORTANT SAFEGUARDS

When using any electrical appliance, basic safety precautions should always be followed, including the following:

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

WARNING: In order to avoid overheating, do not cover the heater.

The heater must not be located immediately below a socket outlet.

Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool

Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

Children of less than 3 years should be kept away unless continuously supervised.

This heater is not equipped with a device to control the room

Product Name	Electric Quartz Heater
Model NO.	RM/469
Rated Power:	1200W
Rated voltage	220-240V~/50Hz
Date of Manufacture	1215
Importer	MADE IN CHINA FOR HYPERMART LTD

Setting 1, Control "Quartz 1 & Quartz 2", the input power is 800W;

Setting 2, Control "Quartz 3", the input power is 400W;

4. Set the power switch to choose the ideal power setting, 400W/800W/1200W

SAFETY CONTROL

Your heater is fitted with a safety device "Tilt-over protection switch" , This heater donot include timer or thermostat.

CLEANING and MAINTENANCE

1. Light accumulated dust may be removed from the heater with a soft cloth. Wipe the exterior surfaces of the heater occasionally with a cloth moistened (not dripping wet) with a solution of mild detergent and water. Dry the case thoroughly with a soft dry cloth before operating the heater.
2. No other user maintenance is required or recommended. If service is required, send your heater to the nearest authorized service depot.
3. Store heater in a clean and dry place when not in use.

REMEMBER - portable electric heaters are designed for spot heating, or as a supplementary heat source. They are not intended to be main sources of heat during the normal heating season.

Note: There may be trace of smoke or odour when unit is first operated. Do not be alarmed. This indicates that a drop of oil fell on the heating coil during the manufacturing process. It will quickly evaporate, and should not re-occur.

1. Children of less than 3 years should be kept away unless continuously supervised.
3. The heater is intended to be placed in away wall more than 150 mm.

temperature.

Do not used this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

Do not use this heater with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.

CAUTION — Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

1. To ensure Familiarity with the controls, safety features, and operation of your heater
-Read all instructions before using.
2. Do not insert foreign objects through the intake or discharge grilles.
3. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
Children should be supervised to ensure that they do not play with the appliance.
5. Disconnect the cord from the outlet before cleaning. A heater should never be used under conditions where it may be immersed, or come in contact with water. Similarly do not plug in your heater if its surfaces are damp.
6. Do not use the appliance on the same socket or electric circuit with other electrical appliances so as to prevent the circuit from being overloaded, which will cause fire.
Please do not prolong the power cords by yourself or use movable socket.

7. Unplug heater by grasping plug and pulling it from the outlet. NEVER YANK ON CORD.
8. If the supply cord is damaged, it must be replaced by it's service agent or a similar qualify person in order to avoid hazard.
9. Do not use in locations when the heater will be left unattended for long periods of time.
(for example -several weeks in an unoccupied summer cottage)
10. Do not use attachments not recommended and sold by MIDEA distributor.
11. Loose connections between the heater plug and the electrical outlet may cause the plug to overheat.
12. Ensure no other appliances are plugged into the same circuit as your heater. A circuit overload could occur resulting in dimmed lights, blown fuses, tripped circuit breakers, or fire hazard.
13. The heater is intended for household indoor use only.
14. The heater must not be located immediately below a socket-outlet.
15. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
16. Warning: In order to avoid overheating, do not cover the heater.
17. The instructions shall state that the heater must not be located immediately below a socket-outlet.
18. Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
19. Do not use this heater with timer.
- 20.




DISPOSAL: Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.

Contact you local government for information regarding the collection systems available.

If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

PART NAME

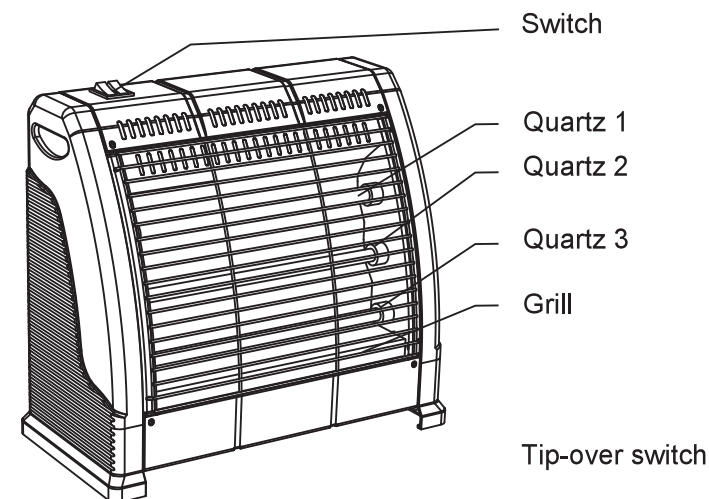

OPERATING INSTRUCTIONS

1. Plug into any 220-240VAC, 50Hz source.
2. Place the heater on the floor at least 1 meter away from the wall and any other objects such as furniture, drapes, or plants, and donot place the heater face the cord.
3. Your heater is equipped with a 2-position power switch.

