 




Blender

INSTRUCTION MANUAL

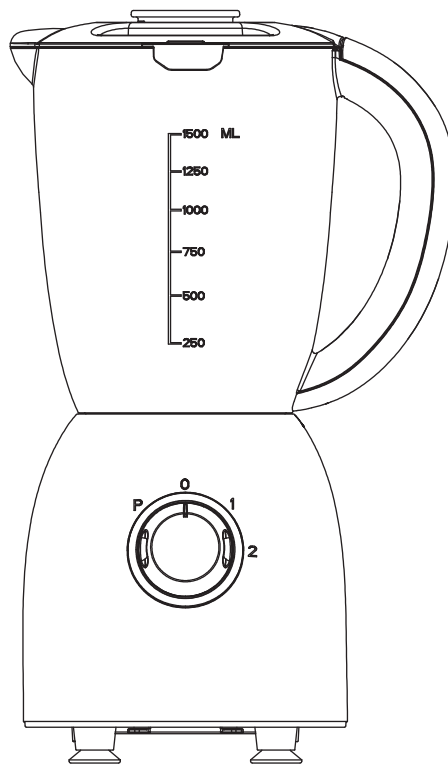

MODEL: RM/477

Read this booklet thoroughly before using and save it for future reference

 
IMPORTANT SAFEGUARDS

When using the electrical appliance, the below basic safety precautions should be followed:

1. Read all instructions.
2. Before using check that the voltage power corresponds to the one shown on the appliance nameplate.
3. Do not let cord hang over edge of table or counter.
4. Do not place on or near a hot gas or electric burner, or in a heated oven.
5. Do not operate any appliance with a damage cord or plug or after the appliance malfunction or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
6. If the supply cord is damaged it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
7. Close supervision is necessary when any appliance is used by or near children.
8. Avoid contacting moving parts.
9. Blades are sharp, so handle carefully.
10. The use of attachment, including jar, jar lid, not recommended or sold by manufacturer may cause fire, electric shock or injury.
11. The appliance cannot be used for blending hard and dry substance, otherwise the blade could be blunted.
12. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
13. To protect against risk of electrical shock do not put motor unit or power cord in water or other liquid.
14. Do not use outdoors.
15. Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but must be used only when the blender is not running.
16. To reduce the risk of injury, never place cutter-assembly blades on base without jar properly attached.
17. Always operate blender with cover in place.
18. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
19. Children shall not play with the appliance.
20. Warning: never use hot liquids or run the appliance empty.
21. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
22. WARNING: Risks of injuries if you do not use this appliance correctly.
23. Be careful when handing the sharp cutting blades, emptying the bowl and during cleaning.
24. The appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments
 - farm houses
 - by clients in hotels, motels and other residential type environments
 - bed and breakfast type environments.
25. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
26. Save this instruction

HOUSEHOLD USE ONLY

KNOW YOUR BLENDER

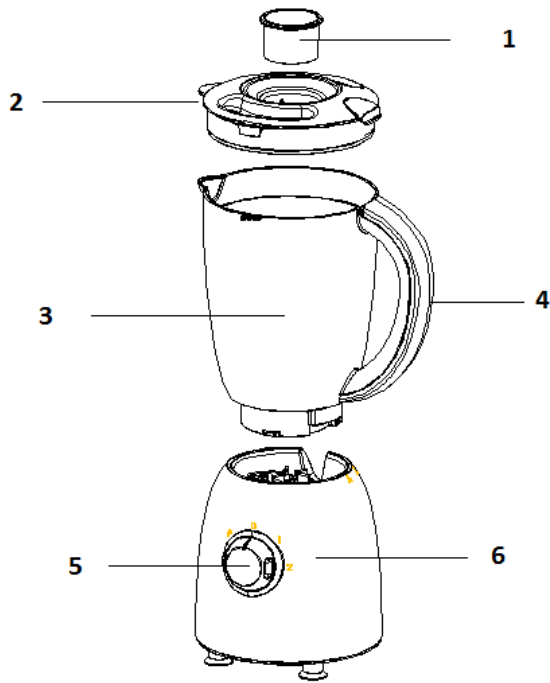

1. Measuring cup
2. Jar lid
3. Jar
4. Handle
5. Speed selector
6. Motor unit

FOR THE INITIAL USE

1. Unpack the appliance and place all parts on a horizontal surface.

2. Immerse the jar, jar lid and measuring cup in warm soapy water and rinse them and dry. Never immerse motor unit in water for cleaning to prevent the risk of electric shock.

Caution: The blade is very sharp, please handle carefully.

3. The correct assembly way will be described in detail in below sections.

Before assembling the jar, be sure the power cord is unplugged from the power outlet and the speed selector is on the OFF position.

The blender jar is suitable for making mixture which the juice and pulp are mixed.

For attaching jar, firstly place the jar lid into the jar and rotate the jar lid until it is locked into the groove of the handle tightly (see Fig.1), then the jar lid is placed tightly and properly with the jar. And then place into the motor unit properly and turns the jar in clockwise until it locks in place (see Fig.2).

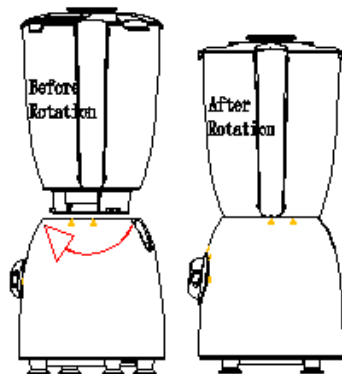 


Fig. 1

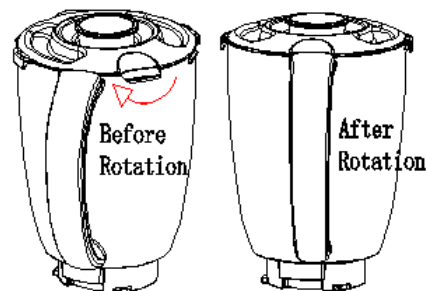 


Fig. 2

Note: Make sure all the assembly is placed properly.

BLENDING FRUIT AND VEGETABLE

1. Before assemble or attach the power cord into the outlet, make sure the speed selector is in the OFF position.
 2. Peel or core the fruit or vegetables and then cut it into small dices, put the food pieces into the jar. Usually certain amount of purified water has to be added to facilitate the smooth running of appliance. The proportion of the food and water is 2:3. The amount of mixture should not exceed the max level as indicated on the jar
- Note:** Never use boiling liquids or run the appliance empty. The jar can be used for crushing ice.
3. Place the jar lid in position according to the operation mentioned above (see Fig.1). And then the safety protection device starts to function.
 4. Turn the speed selector to the desired setting. The 1 setting is the lowest speed and the 2 setting is the highest speed. Repeat to turn switch to Pulse position and then release it to return the OFF position to achieve best ice-crush result.
 5. You may add ingredients into the jar through the center opening of jar lid during operation, and then replace measuring cup if necessary. You just need to press down the measuring cup directly to fix it tightly.
 6. The max operation time per time shall less than 3 minutes. Minimum 10 minutes rest time must be maintained between continuous two cycles.
 7. Turn the Speed control knob to OFF position once the mixture has been blended to your desired consistency.
 8. Remove the jar from the motor unit (rotate the jar anticlockwise and then remove it), carefully take off the jar lid, then pour and serve.

CLEANING AND MAINTENANCE

The Auto Clean feature can clean the blender and blade assembly easily and rapidly in complete safety.

- After use, reassemble the jar and pour a little warm water into it and turn the speed selector to Pulse position for a few seconds to remove the residual food.
- After stop, remove the jar from the motor unit by turning the jar in anti-clockwise and rinse the jar under running water.
- Wiping the outer surface of motor unit with a damp cloth, do not use abrasive cleansers. Never immerse in water or other solution for cleaning.
- Dry all parts and then replace them.

Warning: Do not use abrasive cleansers. Never immerse in water for cleaning.

Note: The blade is very sharp, handle carefully when clean.

ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipment to an appropriate waste disposal centre.