 




# TOASTER OVEN

## INSTRUCTION MANUAL

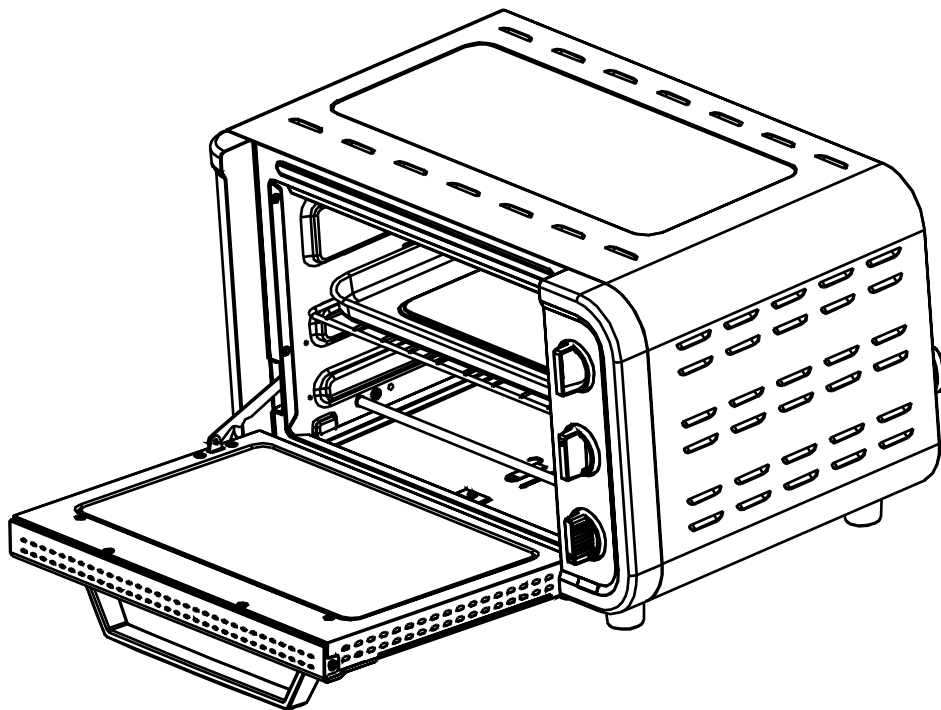

Model: RM/483

Read this manual thoroughly before using and save it for future reference

# IMPORTANT SAFEGUARDS


When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surface. Use handles or knobs.
3. Before using check that the voltage power corresponds to the one shown on the appliance nameplate.
4. To protect against electrical shock do not immerse cord, plugs in water or other liquid.
5. The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
6. Keep the appliance and its cord out of reach of children less than 8 years.
7. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
8. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
9. Use extreme caution when removing tray or disposing of hot grease.
10. Oversize foods or metal utensils must not be inserted in a toaster-oven as they may create a fire or risk of electric shock.
11. A fire may occur if the toaster oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation. Do not store any item on top of the appliance when in operation.
12. Do not clean with metal scouring pads, for finish may break off and the electrical parts may become touchable which may result a risk of electric shock.
13. Extreme caution should be exercised when using containers whose materials are not


metal or glass.

14. Do not store any materials, other than accessories recommended by manufacturers in this oven when not in use.
15. Do not store any of the following materials in the oven, i.e., paper, cardboard, plastic and the like.
16. Do not cover crumb tray or any part of the oven with metal foil, for it will cause overheating.
17. The use of accessories not recommended by the appliance manufacturer may cause injuries.
18. To disconnect, turn any controls to “OFF”, then remove the plug from wall outlet.
19. Do not let cord hang over edge of table or counter or touch hot surface.
20. Do not place on or near a hot gas or electric burner, or in a heated oven.
21. Do not use outdoors.
22. Do not use the appliance for other than intended use.
23. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
24. This appliance is intended to be used in household and similar applications such as:
  - Staff kitchen areas in shops, offices and other working environments;
  - Farm houses;
  - By clients in hotels, motels and other residential type environments;
  - Bed and breakfast type environments.
25. Save these instructions.

## DESCRIPTION

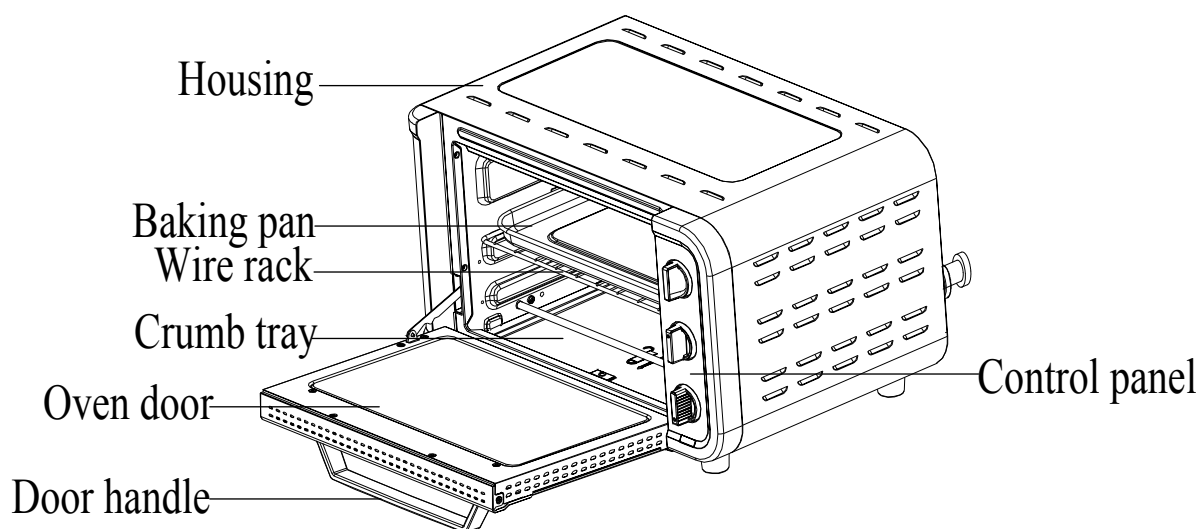

## CONTROL PANEL

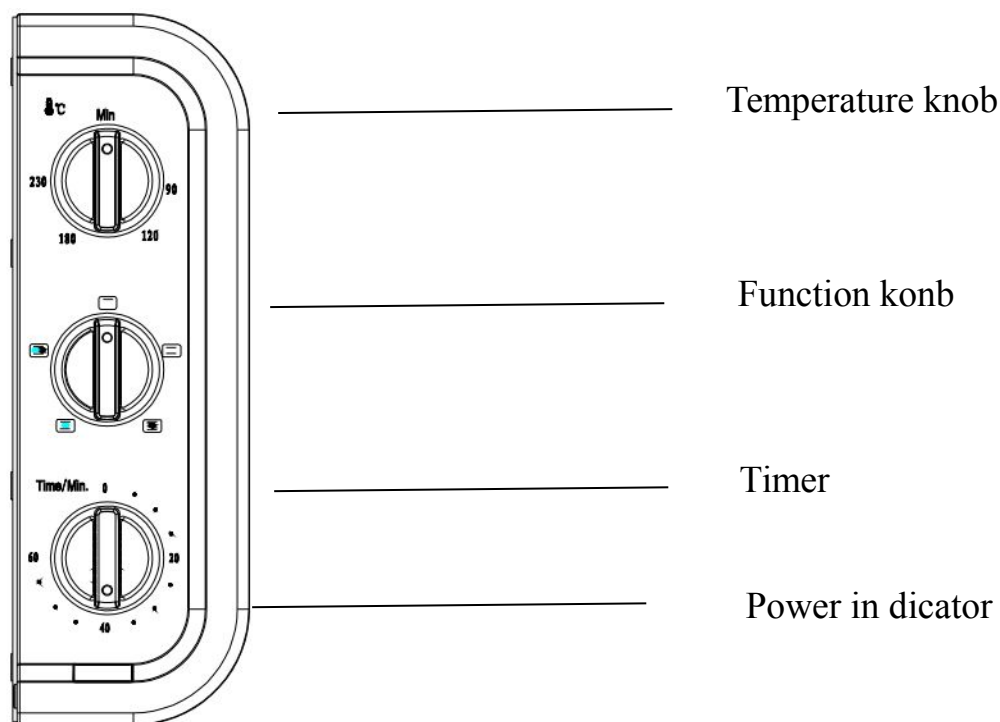

**Power indicator:** After plug the power outlet, the power indicator will be illuminated when the timer is in any position except “0” position.

**Function knob:** This knob could set the operation status of heat element.

Only upper heater energized



Both upper and lower heater energized



Both upper and lower heater energized, **hot air motor energized**



Both upper and lower heater energized, rotation motor energized



Both upper and lower heater energized, rotation and hot air motor energized



**Temperature knob:** Turn the knob clockwise to set the temperature. The max temperature could be set is 230°C, and is suitable for toasting bread, broiling chicken or steak.

**Timer:** Turn the timer to set the operation time. Max time can be set is 60 minutes. If the timer has run to “0” position, the toasting process will be stopped and a bell sound can be heard.

## BEFORE THE FIRST USE

Unpack the appliance and place it on a horizontal surface. Remove out any insert card, poly bag. Then use a damp cloth to carefully wipe the inner cavity wall and housing. Clean all the detachable parts in hot, sudsy water before using.


### NOTE:

1. Initial start-up operation may result in minimal smell and smoke (about 15 minutes). This is normal. It is due to the protective substance on heating elements which protect them from salt effects during shipping from factory. So it is recommended to operate oven dry for about 15 minutes at the first, moreover, Make sure to keep good ventilation of the room.
2. On the wall of inner cavity there are 2 different height of rack guide (slot).
3. You can place the rack at different height to achieve the best toasting performance depending on the status of heat element and size of food. If only upper heat element is energized it is suggest place the rack on the first slot to obtain the heat directly provided that at least 30mm distance has maintained between top of food and top heat element.

4. When setting the timer for less than 10 minutes, always rotate timer to over 10 minutes and then rotate back to your chosen time. This will ensure a safe and accurate setting.
  5. Always monitor the food during operating to ensure that you are not overcooking.
- Caution:** when removing the food from oven always use oven mitts to reduce the possibility of getting scalding.

## OPERATION

### Toast

1. Rotate the temperature knob clockwise to “230°C”, dial the function knob to  “ ” position at which both the heating elements will work. Open the oven door and place the bread on the wire rack up to 6 slices side by side.

**Note:** 1) if only toasting one slice, place the slice at the center of the wire rack. Generally toasting color for one slice is darker than that for four slices in the same time.

2) Before operation, the crumb tray must be placed into position.


2. Choose your crust preference by adjusting the timer. Two minutes shall be needed if you want to light brownness, 6 minutes for medium brownness, 10 minutes for dark brownness. After setting timer, the power indicator will be illuminated. When the toast cycle is finished the bell will ring and the electrical power is automatically turned off. Remember that the longer the time you select, the darker the bread is.

3. To stop the cycle at any time, turn the timer to “0” position

**Note:** bread will burn so do not choose too long time, and close supervision is necessary.

### Bake (for baking biscuit, bread, cake, pizza (12”) and so on

It is recommended to preheat the oven before putting on food. When the temperature of cavity has reached the preset temperature the heat element will stop heating.

1. Set the operating temperature and time depending on thickness of your food and your favor.
2. Turn the function knob to the “  ” position (details refer to the control panel on the above).
3. Put the baking pan on the wire rack and place food on the baking pan after preheating.

4. When finished, the timer will return to “0” position, the appliance and indicator will automatically turn off.
5. Remove the food from the oven.

For broiling function, only the upper heating element will work, the setting is applicable for browning the top surface of food or broiling the chops or steaks.

1. Turn the function knob to “Broil” position. And turn the temperature knob to “230°C”.  
We recommend preheating 15 minutes with the door closed before broiling food to achieve satisfactory result.
2. Place food in baking pan for broiling. Always use the baking pan on the wire rack when broiling. Do not cover the wire rack with aluminum foil.
3. Place the baking pan on the wire rack and close the oven door.
4. Turn the timer again to desired cooking time.
5. When broiling the meat or fish, cook first side just to turn meat color then turn over to finish second side to desired doneness. Brush each side with melted butter or olive oil.  
**Tips:** For broiling the fish or chicken, it is suggested broiling skin-side down first. It is unnecessary to turn over the fish fillet or lobster tails during broiling. Broiling one side is enough. For broiling the lobster tails, cut through back of shell. Spread open. Brush with melted butter after half of the broiling time.
5. When finished broiling, using oven mitt or pot holder, remove wire rack with baking pan, and turn the timer knob to “0” position .

## USEFUL TIPS

1. Condensation will appear on the oven door for some foods and then disappear. This is normal.
2. Cook food immediately after defrosting.
3. Frozen foods and thick meat will take longer to cook.
4. When defrosting, place the food on the baking pan.
5. Avoid opening the oven door too frequently to prevent heat loss.
6. When toasting, frozen bread or many slices should be at a darker setting than 1 regular slice.
7. When baking, smoke will likely appear. Removing excess fat prior to baking can reduce this.

## CLEAN AND MAINTENANCE

**Caution:** Before cleaning the toaster oven unplug it and allow it to cool completely.

1. Wash all the attachments with mild, soaped water.
2. Using a mild cloth to clean the inner of the oven, remember to clean it regularly.
3. To clean the door by using a hot cloth with detergent or soap.
4. Do not immerse the unit in the water to clean the appliance.
5. Press down the tab of crumb tray as red arrow illustrated (see Fig. 1) and push it towards to the rear wall of toaster oven to open the crumb tray (see Fig. 2). Wipe interior of crumb tray with a damp cloth. After cleaning, close the crumb tray to the bottom of oven and then pull it towards to the direction of oven door to lock it.
6. DO NOT use the dishwasher to clean any of the accessories which are included with this product.
7. DO NOT use any abrasive cleaning products.
8. CLEAN accessories with a soft cloth in hot water with liquid detergent or soap.
9. Do not wipe the heating elements.
10. Do not install the wire rack or baking pan on the lower heating element directly.
11. Do not use any metal pad to clean the surfaces of oven to avoid reducing finish.

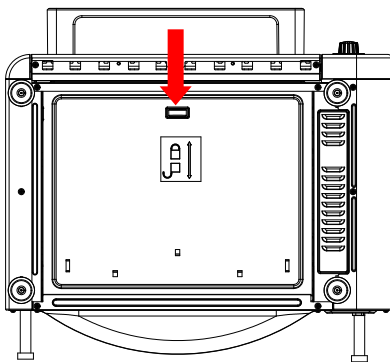 


Fig.1

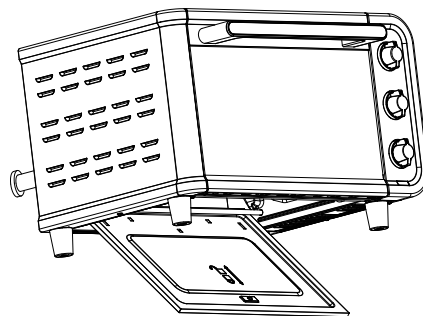 


Fig.2



## CAUTION

TO PREVENT COUNTERTOP FROM BEING DAMAGED, THE TOASTER OVEN MUST BE OPERATED WITH THE CRUMB TRAY IN PLACE, AND CLEANED OF EXCESS FOOD.


NEVER OPERATE YOUR TOASTER OVEN WITH THE OVEN DOOR OPEN.

NEVER PUT THE BAKING PAN (OR ANY OTHER ACCESSORY) DIRECTLY ON THE TOP OF THE LOWER HEATING ELEMENTS.

## TROUBLESHOOTING GUIDE

| Item | Problem  | Solution   |
|------|--|--|
| 1    | Unit smokes during bake function                               | Initial start up operation may result in minimal smell and smoke (about 15 min.). This is normal. It is due to the protective substance on heating. Elements which protects them from salt effects during shipping from factory. |
|      |  | Smoke in baking functions often means the multi – use pan or Interior is dirty.  |
|      |  | Smoke almost always appears in baking and is normal. Cut off excess fat prior to baking to reduce smoke  |
|      |  | Stop using appliance if smoke source is the power cord. Unplug.  |
| 2    | The wire rack is stuck and oven door does not operate smoothly | Remove wire rack and clean inside the rack grooves inside oven chamber. Also clean inside of crumb tray. Check that hooks on oven properly aligned into wire rack.   |
| 3    | Toast black and smoking or too light                           | Choose a lighter or darker crust setting   |

## Environment friendly disposal

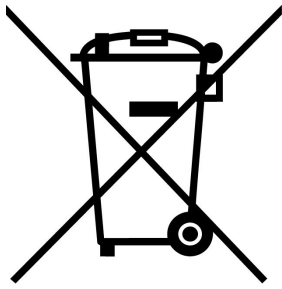

You can help protect the environment!  
Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center