




Ideas for **easy living**

Wide-Slot Toaster

INSTRUCTION MANUAL

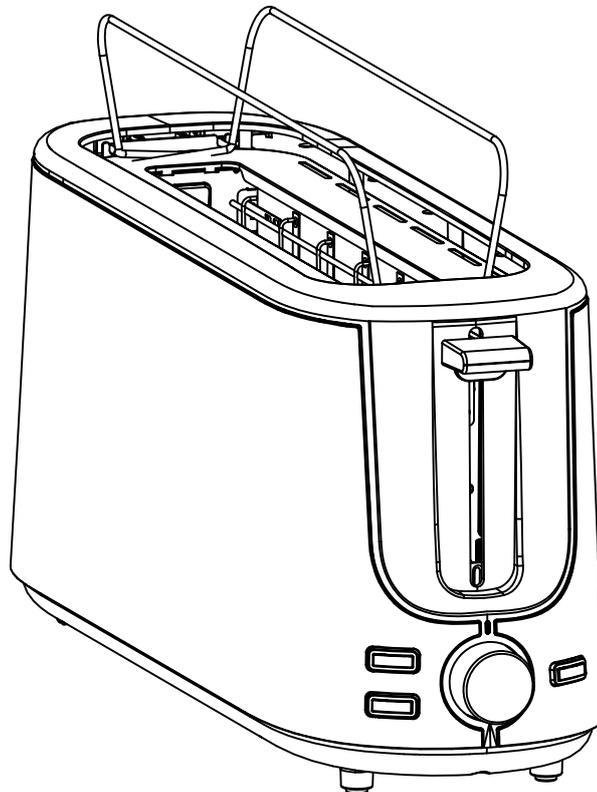

MODEL: RM/586

Read this manual thoroughly before using and save it for future reference

IMPORTANT SAFEGUARDS

When using electrical appliance. Basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the toaster.
3. Do not touch hot surface. Use handles or knobs only.
4. To protect against electrical shock, do not immerse cord, plug, or any part of the toaster in water or other liquid.
5. Close supervision is necessary when it is used by or near children.
6. Unplug unit from outlet when not in use and before cleaning.
7. Do not operate any appliance with a damaged cord or plug, or in abnormal state. If its main cord is damaged, it must be replaced by the manufacturer, the nearest service agent or a qualified person.
8. Do not let the cord hang over edge of table or counter, or touch hot surface.
9. Do not place on or near a hot gas or electric burner, or in a heated oven.
10. Do not use the appliance for other than its intended use.
11. Oversize food, metal foil packages or utensils must not be inserted in the toaster as they may cause fire or electric shock.
12. Bread may burn, so toasters must not be used near or below curtains and other combustible materials, and must be watched.
13. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
14. Don't attempt to dislodge food when toaster is in operation
15. Be sure to take the bread out carefully after toasting so as to avoid injuries
16. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
17. Keep the appliance and its cord out of reach of children less than 8 years.

18. Warning: if toast of small bread slices less than 85mm length, you must pay attention to the potential risk of burning when taking out the slices.

19. The appliance is not intended to be operated by means of an external timer or separate remote-control system.


20. Don't use the appliance outdoors.

21. This appliance is intended to be used in household and similar applications such as:

- Staff kitchen areas in shops, offices and other working environments;
- Farm houses;
- By clients in hotels, motels and other residential type environments;
- Bed and breakfast type environments.

22. Save these instructions.

KNOW YOUR TOASTER

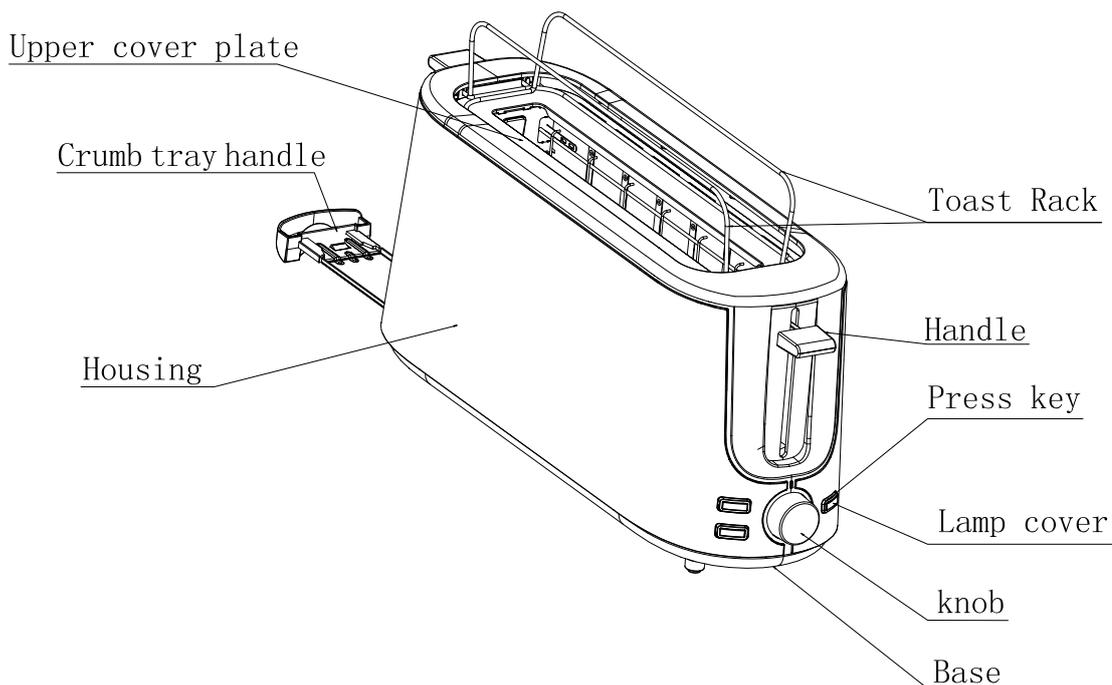

FOR THE FIRST USE

As there is manufacturing residue or oil remained in the toaster or heat element, usually it will emit the odor for the first use. It is normal and will not occur after several times use, for the first use it is suggested the operation according to the below steps, except without

bread, then let the toaster cool down and begin toasting the first slice.

USING YOUR TOASTER

1. Put bread slice into the bread slot, which can be inserted two slices at most every time. If only toasting one side or irregular bread, the bread must be put on the toast rack which only can be toasted one piece every time. When toasting on the toast rack, raise rack control handle to make it uplift, then put the bread on the toast rack. Press down the rack control handle to reset the rack when not in use.

**NOTE: 1). Make sure the crumb tray is completely positioned in place before using.
2). Before toasting on the toast rack, let the appliance cool down.**

2. Plug the power cord into the outlet.
3. Set color control knob to your desired color. There is 7-position level (see fig.1), the lowest “1” is for light and the highest “7” is for dark. The bread slice can be toasted to golden color at the middle position.

 


Fig.1

NOTE: 1). Toasting color for one slice is darker than that for two bread slices at the same level.

2). If toasting continuously, toasting color for the latter bread is darker than that for the anterior bread at the same level.

3) Please use 1 to 3 position for toasting one slice bun bread for toast rack in the center.

4. Lower carriage handle down vertically until it is latched in place, the indicator of **Cancel** will be illuminated, and the appliance will begin toasting at once.

NOTE: The carriage handle can only be latched when the appliance is plugged in.

5. Once the bread has been toasted to the preset color, the carriage handle will automatically pop up. Also you can uplift the carriage handle a little to remove the bread readily (see fig.2).

NOTE: During toasting, you may also observe the toasting color. If it is satisfactory, you can press the Cancel button to cancel the operation at any time, but never lift carriage handle to cancel toasting.

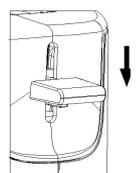


Fig.2

6. If you want to toast frozen bread, firstly press **Defrost** button and the indicator of **Defrost** button will be illuminated, set color control knob to your desired color, and then lower carriage handle down vertically until it is latched

in place. In this mode bread will be toasted to your desired color.

7. If you want to warm cold toasted bread, firstly press the **Reheat** button and the indicator of **Reheat** button will be illuminated, and then lower carriage handle vertically until it is latched in place. In this mode toasting time is fixed, so long as time runs over, the carriage handle will automatically spring up and end up the reheating process.

 
CAUTION

1. Remove all protective wrappings prior to toasting.
2. If toaster starts to smoke, Press **Cancel** to stop toasting immediately.
3. Avoid toasting the food with extremely runny ingredients such as butter.
4. Never attempt to remove bread jammed in the slots without unplugging the toaster from the electrical outlet first. Be sure not to damage the internal mechanism or heating elements when removing bread.
5. The bread slot is only applicable for toasting regular bread slice, like the irregular bread or round bread, you can toast it on the toast rack.
6. In order to achieve uniform color we recommend that you should wait minimum 30s between each toasting so that color control can reset automatically.

CLEANING AND MAINTENANCE

1. Before cleaning, unplug from the appliance and let the appliance cool down completely.
2. Wipe the outside with soft dry cloth, never use metal polish.
3. Pull out crumb tray at the bottom of toaster and empty it. If toaster is used frequently, accumulated bread crumbs should be removed at least once a week. Make sure the crumb tray is completely closed before using the toaster again.
4. When not use or storage, the power cord may be wound under the bottom of toaster.

ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment!
Please remember to respect the local regulations:
hand in the non-working electrical equipments to
an appropriate waste disposal centre.

