

## Maintenance

---

### Main Technical Parameters

	Wash
Capacity (dry Clothes)	9.0kg
Power Supply	220V/50Hz
Input Power (lower drain)	320W
Maximum Time	15 min.
Maximum water pressure	0.6Mpa
Overall dimension	555x535x923(mm)
Net weight	13kg
Pump Input Power	30W



Before using your washing machine, please read this manual carefully and keep it for future reference.

# Single Tub Washing Machine OWNER'S MANUAL

**MODEL:RW/130**

### Read This Manual




Inside you will find many helpful hints on how to use and maintain your **single tub washing machine** properly. Just a little preventative care on your part can save you a great deal of time and money over the life of your **single tub washing machine**. You'll find many answers to common problems in the chart of troubleshooting tips. If you review the chart of troubleshooting tips first, you may not need to call for service.


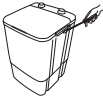



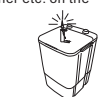



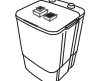







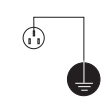









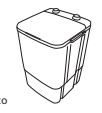



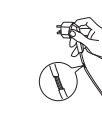

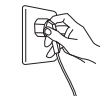






# TABLE OF CONTENTS

Safety Precaution .....	1
Attention To Installation .....	2
Lay upper drain hose .....	2
Installation site .....	2
Preparation Instructions .....	2
Reference of laundry quantity corresponding to different capacities .....	2
Name Of Parts .....	3
Accessories .....	3
Introduction Of Control Panel .....	3
Quick Start .....	4
Washing Method .....	4
Rinsing Method .....	4
Attention To Maintenance .....	4
Cabinet maintenance .....	4
Anti-freezing protection .....	5
Notes .....	5
Main Technical Parameters .....	6

# SAFETY PRECAUTION

Be sure to comply with the following to prevent damage to body and property of you and others:

	The sign stands for "pay attention", and the picture of specific items needs attention shows in $\Delta$ .
	The sign stands for "forbid", and the picture of specific items forbidden shows in $\text{O}$ .
	The sign stands for "must do", and the picture of specific items must be done shows in $\bullet$ .

 
<p>Do not dismantle the machine by yourself.</p>  <p>Forbid dismantling</p> 	<p>Do not install the machine in damp or rainy environment to avoid electric shock, fire, machine failure, or deformation.</p>  <p>Avoid dampness</p> 	<p>Do not place inflammable materials like burning candle, mosquito incense, cigaret etc. or heating source like electric stove, calorifier etc. on the machine.</p>  <p>Forbid</p> 	<p>Do not spray water directly to the machine.</p>  <p>Avoid spraying water</p> 
<p>Do not let baby sit on it or place heavy things on it.</p>  <p>Forbid</p> 	<p>Do not wash clothes that are stained with kerosene, petrol, alcohol, and other flammable substance.</p>  <p>Forbid</p> 	<p>Make sure that the water inlet hose is connected and the tap is opened before washing.</p>  	<p>Do not exceed the max. water level to avoid water overflowing and machine failure.</p>  <p>Forbid</p> 
<p>To avoid electric shock resulting from electric leakage, please connect grounding wire of the plug properly.</p>  <p>Grounding</p> 	<p>Do not let baby climb to the machine or play near running tub to avoid accident.</p>  <p>Forbid</p> 	<p>If use warm water, the water temperature should not exceed 50°C.</p>  <p>Forbid</p> 	<p>Do not wash down-filled coat, raincoat or similar clothes.</p>  <p>Forbid</p> 
<p>Wipe off dirty and dust on the plug often to prevent poor contact with power supply.</p>  	<p>Do not put hands into the tub before it stopping running.</p>  <p>Forbid putting into</p> 	<p>Do not replace power cord by yourself.</p>  <p>Forbid</p> 	<p>Do not damage the power cord and plug to avoid electric shock, short circuit or fire.</p>  <p>Forbid</p> 
<p>Insert the plug tightly when use.</p>  	<p>Do not pull the cord when unplug the plug.</p>  	<p>Do not insert or unplug the plug with wet hands to avoid electric shock.</p>  <p>Forbid wet hands</p> 	<p>Unplug the plug from socket after use.</p>  <p>Unplug the plug</p> 

# Installation

## Attention To Installation

### Lay upper drain hose

- Needs a drain hose with minimum diameter of 3 cm, and minimum carry away capacity of 40 liters per minute.
- For upper drain system, the drain hose must be placed at least 86 cm (30 inches) from the bottom of machine, but not higher than 100 cm.

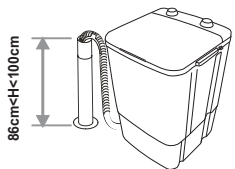

**FOR UPPER DRAIN SYSTEM ONLY**

### Installation site

In order to avoid electrical failure, discoloration and deformation, do not install the machine in the following places:

- Locations exposed to direct sunlight
- Locations exposed to rain or snow
- Locations with uneven or unstable ground



## Preparation Instructions

- Plug in power and connect the water inlet hose.
- Lay down the lower drain hose and connect it to the sewer, or lay the upper drain hose to places as indicated in page 2.
- Check that there are no objects such as coins, hairpins, mud or sand in the pocket.
- Strings should be knotted in advance to prevent entanglement.
- Clothes can be classified for washing according to the texture, dirty degree and color.
- For small pieces (e.g., stockings) or fluffy clothes, put them into a nylon net for spinning.

 
**Attachment: Reference of laundry quantity corresponding to different capacities**

Laundry Capacity	Shirt about 500 g	Uniform about 650 g	Jeans about 900 g	Jacket about 1600 g
2.0kg Capacity	about 4 pcs.	about 3 pcs.	about 2 pcs.	about 1 pcs.
4.0kg Capacity	about 8 pcs.	about 6 pcs.	about 4 pcs.	about 2 pcs.
6.0kg Capacity	about 12 pcs.	about 9 pcs.	about 6 pcs.	about 3 pcs.
8.0kg Capacity	about 16 pcs.	about 11 pcs.	about 8 pcs.	about 4 pcs.
.....	.....	.....	.....	.....


• The figure above is for reference only, specific weights are subject to actual clothes.

# Structure Instruction


## Name Of Parts

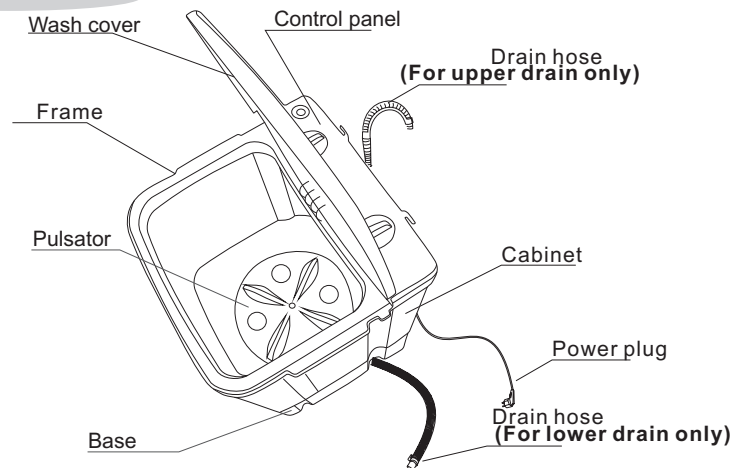

## Accessories

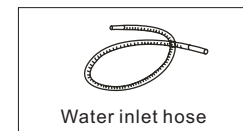 

## Introduction Of Control Panel

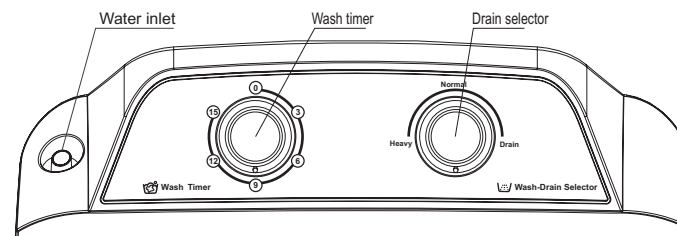 


※ The drawing above is for reference only, specific drawing is subject to actual models.

- Water inlet: be used to inject water.
- Wash timer: be used to select required washing time.
- Drain selector: For washing or rinsing, select "Normal" or "Heavy". For Draining, select "Drain".


# Usage method
 
## Quick Start

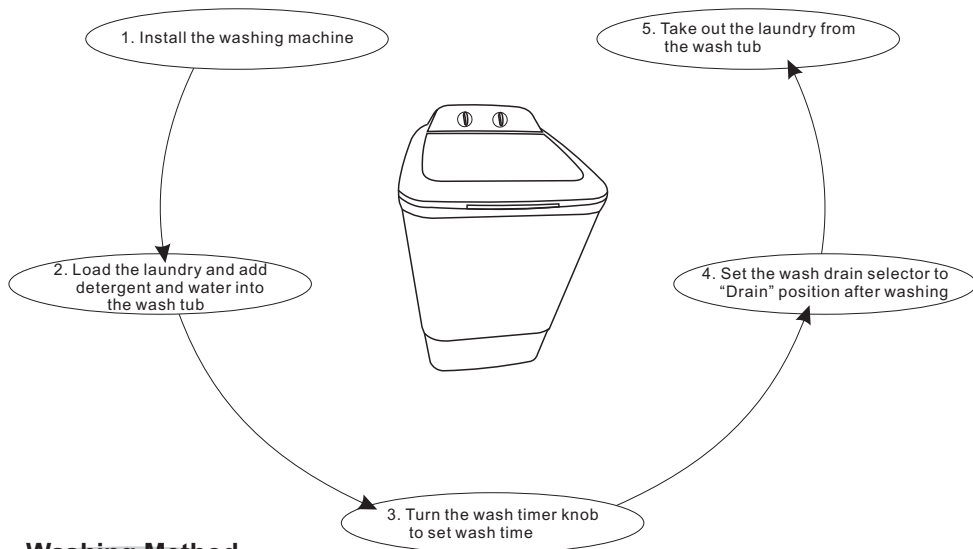

## Washing Method

 1. Insert the water inlet hose into the water inlet mouth.
2. Set wash program "Normal" or "Heavy" as per amount and texture of laundries.
3. Put the laundry into the wash tub, and add detergent into it. When fill water to half of the desired water level, turn off the water tap and let laundries soak in the solution for minutes, then fill water to desired water level and turn off the water tap.
4. Turn the "Wash timer" knob to set wash time.
5. Drain out the water in the wash tub after wash.

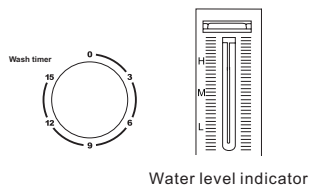

## Rinsing Method

1. Put laundries which have already been washed into the wash tub.
2. After filling water to the desired level, turn off the water tap to save water.
3. Turn the "Wash timer" knob to the desired time (about 3-5 minutes) for rinsing.
4. Drain out the rinsing water in the wash tub.
5. The above steps can be repeated.

- △The appliance can not be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- △The new hose supplied with the appliance are to be used and that old hose should not be used.
- △Do not wash waterproof clothes or clothes that float easily to avoid abnormal vibration or damage to the clothes.

## Attention To Maintenance

### Cabinet maintenance

After using the machine, wipe the moisture and stain on it with a piece of soft cloth. To avoid damage to the surface, do not use corrosive or volatile chemicals.



# Usage method

## Anti-freezing protection

### ▲ To prevent from freezing:

- ① Turn off the water tap, remove the water inlet hose and empty water in the water inlet hose completely.
- ② Lay the drain hose and then empty the water in the tub.

### ▲ If the water is frozen, please take the following steps:

- ① Put the water inlet hose into warm water of about 50°C.
- ② Keep about 2 liters of warm water below 50°C in the spin tub for about 10 minutes, and then lay the drain hose and empty the water.
- ③ Fit the water inlet hose and turn on the water tap to confirm water filling and draining work properly.



### ⚠ After you use the machine, never forget to do the following two things:

1. Disconnect the power plug.
2. Remove the water inlet hose.

## Notes

The washing machine employs alternative current with rated voltage and frequency. When voltage fluctuates between -10% and 10% of the rated voltage, the machine can work normally. Connection mode of the power cord of this machine is Y-shaped connection. Users should not detach or reconnect the wire by themselves. If this part needs to be repaired, please contact the designated service center.

- The maximum gradient of the supporting surface for the machine should not exceed 2°.
- Do not tear down electrical wires and components in the machine by yourself.
- There are holes on the base for ventilation. These holes should not be blocked by foreign objects (carpets, etc.).
- Never connect the grounding wire with the live wire, or it may lead to an electric shock.
- If the power cord is damaged, it must be replaced by a qualified person to avoid a hazard.

**If the following symptoms occur, please disconnect the power plug and perform the following checks:**

Symptom	Reason
The washing machine does not work.	<ul style="list-style-type: none"> <li>• Check that the power supply is in good condition.</li> <li>• Check that the power plug is inserted properly.</li> <li>• Check that the wash timer knob or the spin timer knob is not in the "0" position.</li> </ul>
The drain hose does not work.	<ul style="list-style-type: none"> <li>• Check that the drain hose is not laid too high.</li> <li>• Check that the drain hose is not frozen.</li> <li>• Check that the drain hose is not blocked by foreign matter.</li> </ul>
There is abnormal noise during washing.	<ul style="list-style-type: none"> <li>• Check that there are no coins or any other foreign objects dropped into the wash tub.</li> </ul>