


291.00 mm




**RM/180  
DRY IRON**

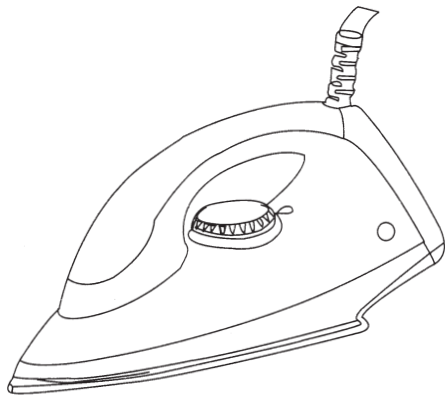

**INSTRUCTIONS**

**INSTRUCTION**

- A. Supply cord
- B. Swivelling cord protector
- C. Temperature control dial
- D. Supply pilot light
- E. Soleplate

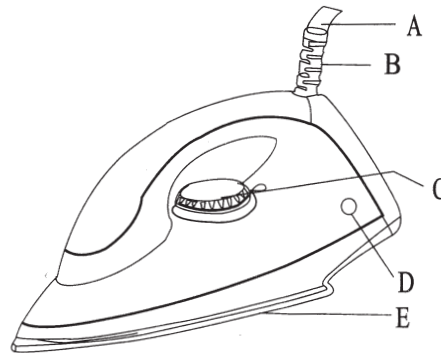

**Important**

- Please read these instructions for use carefully in conjunction with the illustrations before using the appliance.
- Never use the appliance if damaged in any way.
- Take care that children cannot touch the iron when hot and that they cannot pull the mains cord.
- The cordset should not be allowed to touch the soleplate when it is hot.
- Never immerse the iron in water.
- Always place the iron with its back on a firm flat surface when interrupting ironing and after use. When leaving, even when only for a short while, always unplug the iron.
- Keep the soleplate smooth; avoid hard contact with metal objects.
- Some parts of the iron have been slightly greased and as a result the iron might slightly smoke when connected for the first time. After a short while, however, this will cease.
- Do not leave the iron unattended while it is connected to the mains supply.
- If the main cord is damaged, it must be replaced right away by its original type only.

## Ironing temperature

- If some kind of finish has been applied (gloss, wrinkle, relief ect.), the textile can best be ironed at a lower temperature.
- First sort out the fabrics according to ironing temperature: wool with wool, cotton with cotton, etc.
- The iron heats up quicker than it cools down. Therefore, start ironing the articles requiring the lowest temperature such as those made of synthetic fibres.
- Then progress to the higher temperatures. Finish by ironing cotton and linen.
- If the article is made of a mixture of different fibres, you must always select the lowest ironing temperature of the composition and those fibres. (E. g. an article consisting of "60% polyester and 40% cotton" should be ironed at the temperature indicated for polyester(.).
- If you do not know what kind of fabric the article is made of, find a spot, which will be invisible when wearing or try using the table for ironing temperature. It is recommended to start at a low temperature and increase to one, which gives the required results.

- Velvet and other textures which rapidly acquire shiny spots should be ironed in one direction only (with the nap), applying only light pressure. Always keep the iron moving.
- Iron the reverse side of synthetic materials and silk to prevent shining spots. To prevent staining do not use the spray on silk or other delicate fabrics.

## Setting the temperature

- Set the temperature in line with the international Dot Symbols
- Stand the iron on its heel and connect to main supply
- Set the appropriate ironing temperature indicated in the ironing instructions or in the fabric table by means of the temperature dial.
- Insert plug into the wall socket. The pilot light will turn on
- When the pilot light turns off and suddenly turns on again, you can start on ironing the pilot light will turn on from time to time during ironing. This is just a normal operation of the iron.
- If you set the temperature control to a lower setting after ironing at a high temperature, do not recommence ironing before the pilot light comes on again.

## Ironing tips

- Iron with a straight back. Adjust the height of the ironing board so that the handle of the iron is on the same level as your elbow.
- Pressing onto the iron is not necessary. provided that the temperature has been set correctly. Ironing is most effective if the laundry is slightly damp.

## When finished ironing

- Place the iron on its rear side.
- Set the temperature dial to position "MIN".
- Remove the main plug from the wall socket.
- Let the iron cool down for at least 30 minutes.
- You can wind up the mains cord and then fix the cord clip.
- Store the iron standing on its rear side to prevent damage to soleplate.

## Cleaning

- Before cleaning remove the mains plug from the wall socket the iron to cool down sufficiently.
- The appliance can be cleaned with a damp cloth.