



SHOWCASE USERS MANUAL

MODEL: CF/200

CF/201

CF/202

CF/203

CF/214


Please read this user's manual thoroughly before using.
Keep this manual handy for further reference.

Dear Consumers:

Thank you for purchasing our products very much. In order ensure your safety and achieve the best using effect, pls read this instruction carefully.

I 、 Survey of Product

1. It uses quality, effective and hermetic compressor with broad rang of starting voltage, suitable ambient temperature: not higher than 38°C, reasonable matching of the showcase system guarantees its powerful refrigerant ability and energy saving.
2. Goods stored can be displayed clearly through the door made from luxurious hollow glass.
3. The thermal insulation layer of the showcase made from hard polyurethane foamed plastics makes it be light and good ability of cold-prevent.

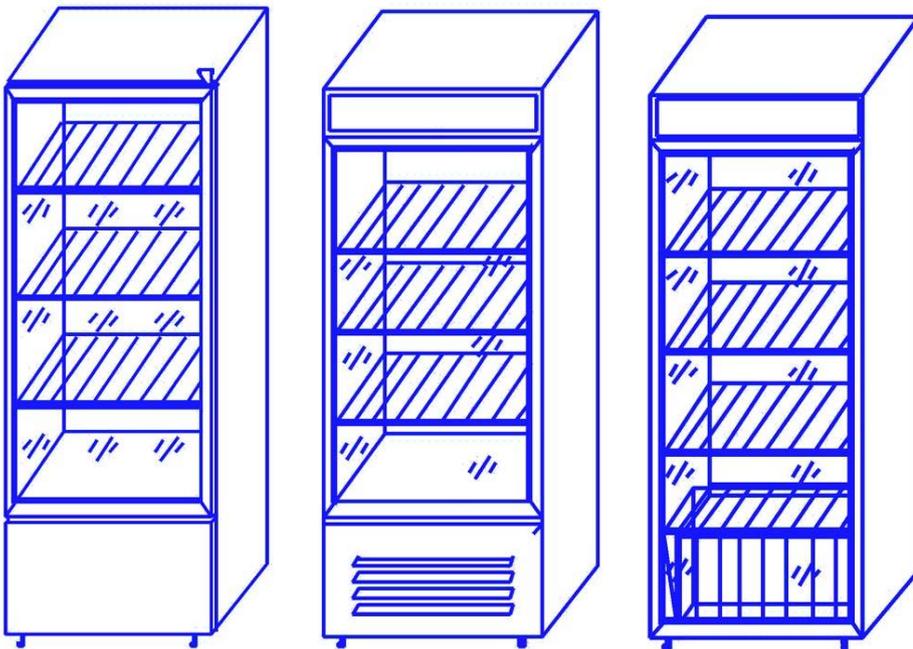

II、 Caution for Safety

1. Range of workable voltage: 187~242V. In order to avoid damaging the electrical performance of the compressor, please equip with a power-regulated appliance. With the power not less than 1000w, when the voltage is lower than 187V or higher than 242V.
2. Individual single-phase socket must be used. It should be reliably connected to a grounding wire. Caution: The grounding wire is not allowed to connect to a water pipe or a gas pipe.
3. Strong base, strong acid, organic solvent and corrosive goods or those are easy to pollute to food are prohibited storing in the showcase; otherwise, it can cause corrosiveness or accident.
4. Don't arise the showcase or the shell of the electric parts, or it will cause the decline in insulation and the corrosiveness.
5. When the showcase will be out of use for a long time, disconnect the power first, then clean it. Please examine the circuit whether it is ok before reuse.

III、 Caution for Using

1. Unpack all packages before using the showcase. Don't topple it over more than 60° , while moving it.
2. The showcase should be installed in the environment of good ventilation, Cool and dry and without corrosive gas. It should not be installed close to heat sources or directly under the sunlight. The space more than 10cm between the wall of the front and the back of the showcase should be allowed. When installing, the universal wheels should be padded well. So as to make the showcase be level and stable, or it will cause vibration and too much noise.
3. When initial operation, the refrigerator should run emptily about one hour before storing food in it.
4. The thermostat could adjust temperature inside the showcase. When you turn the knob in clockwise. The bigger the figure, the lower the temperature. Generally, the position of '3-4' is suitable. '0' position stand for stopping operation. '6' position will be operating continually.
5. To save energy, the door should not be frequently opened for left open for a long time.
6. The surface and the inside of the showcase should be dry and clean. Long term moisture with cause the showcase rust slowly. (There will be some stains on the surface.)
7. Periodical clean is suggested for your reference. Generally, 30-45 days once is best. When cleaning, it is best to wipe the inside and the surface of the showcase with the soft cloth ok in neutral soapsuds or detergent.

Caution: To ensure safety, the power plug must be pulled out before cleaning.

IMPORTANT SAFETY INSTRUCTIONS
READ CAREFULLY AND KEEP FOR FUTURE REFERENCE